

Operation and Maintenance Manual

106R Rocking Piston Oil-less Air Compressor



Dear Customer:

Thank you for purchasing this Gast product. It is manufactured to the highest standards using quality materials. Please follow all recommended maintenance, operational, and safety instructions and you will receive years of trouble free service.

A WARNING



PLEASE READ THIS MANUAL COMPLETELY BEFORE INSTALLING AND USING THIS PRODUCT. SAVE THIS MANUAL FOR FUTURE REFERENCE AND KEEP IN THE VICINITY OF THE PRODUCT.

TABLE OF CONTENTS

Product Use, Criteria, and Purpose	3
Mounting	4
Plumbing	4
Accessories	4
Motor Control	4
Electrical Connection	
Extension Cords	4
Operation	
Maintenance	
Shut Down Procedures	
Service Kit Installation	
Parts and Ordering Information	
Troubleshooting Chart	
Warranty Policy	11

PRODUCT USE CRITERIA, AND PURPOSE

- · Pump only clean, dry air.
- Operate at 32°F to 104°F (0°C to 40°C).
- · Protect unit from dirt and moisture.
- Do not pump flammable or explosive gases or use in an atmosphere that contains such gases.
- Protect all surrounding items from exhaust air. This exhaust air can become very hot.
- Corrosive gases and particulate material will damage unit.
 Water vapor, oil-based contaminants, or other liquids must be filtered out.
- Consult your Gast Distributor/Representative before using at high altitudes.
- This pump is oil-less and requires NO lubrication.
- Compressor surfaces can become hot during operation. Do not touch.

Your safety and the safety of others is extremely important.

We have provided many important safety messages in this manual and on your product. Always read and obey safety messages.



Printed in the USA

This is the safety alert symbol. This symbol alerts you to hazards that can kill or hurt you and others. The safety alert symbol and the words "DANGER" and "WARNING" will precede all safety messages. These words mean:

⚠ DANGER

You <u>will</u> be killed or seriously injured if you don't follow instructions.

⚠ WARNING

You <u>can</u> be killed or seriously injured if you don't follow instructions.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the safety instructions are not followed.

INSTALLATION



Electrical Shock Hazard

Disconnect electrical power at the circuit breaker or fuse box before installing this product.

Install this product where it will not encounter water or other liquids.

Install this product where it will be weather protected.


Electrically ground this product.

Failure to follow these instructions can result in death, fire, or electrical shock.

Correct installation is your responsibility. Make sure you have the proper installation conditions and that installation clearances do not block air flow.



Blocking air flow over the product in any way can cause the product to overheat.

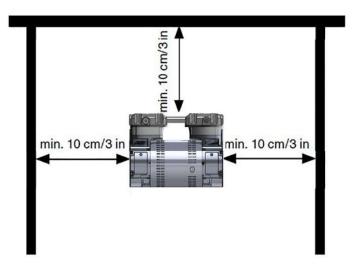

MOUNTING

This product can be installed on a horizontal surface. Mounting the product to a stable, rigid operating surface and using supplied shock mounts will reduce noise and vibration. This product is provided with vibration mounts and adjustable mounting foot. To adjust mounting pattern, loosen vibration mounts to and slide mounting bracket to desired location. Secure vibration mounts to body and mounting bracket before attaching compressor to application.

WARNING

Compressor and vacuum pumps with AC induction motors have a starting current higher than normal operating current.

The duration of the starting current is defined by the operating environment, the pneumatic load, voltage applied at the motor, and connection plumbing.

Diaphragm and Rocking Piston technologies must be started and allowed to reach running speed before pneumatic load is applied. Starting current, voltage, pneumatic load, connection plumbing, and environmental conditions must be evaluated by the customer in the end use system.

Diaphragm and Rocking Piston units will not start under a load because the valves, diaphragm, and rocking piston cup seal do not allow for the head pressure to relieve. A sufficient volume of air at zero pressure differential must be provided to start the unit repeatably. Bleed orifices, relief valves, oversized plumbing, and biased valves are common methods of ensuring zero pressure differential volume of air is provided to the pump allowing it to reach running speeds.

In systems where storage of built-up pressure is utilized, check valves should be installed between any pump and the system.

In all instances, please consult GAST Manufacturing Technical Assistance for proper operation of pumps and compressors.

PLUMBING

Remove plugs from the IN and OUT ports. Connect with pipe and fittings that are the same size or larger than the product's threaded ports. Be sure to connect the intake and exhaust plumbing to the correct inlet and outlet ports. Ports will not support plumbing.

ACCESSORIES

The product's external intake and exhaust muffler will provide adequate filtration in most applications. Check filters periodically and replace when necessary. Consult your Gast Distributor/ Representative for additional filter recommendations.

Install relief valves and gauges at inlet or outlet or both, to monitor performance. Check valves may be required to prevent back streaming through the pump.

MOTOR CONTROL

It is your responsibility to contact a qualified electrician and assure that the electrical installation is adequate and in conformance with all national and local codes and ordinances. The metal capacitor must be grounded.

Determine the correct overload setting required to protect the motor (see motor starter manufacturer's recommendations). Select fuses, motor protective switches or thermal protective switches to provide protection. Fuses act as short circuit protection for the motor, not as protection against overload. Incoming line fuses must be able to withstand the motor's starting current. Motor starters with thermal magnetic overload or circuit breakers protect motor from overload or reduced voltage conditions.

The wiring diagram supplied with the product provides required electrical information. Check that power source is correct to properly operate the dual-voltage motors.



Electrical Shock Hazard

This product must be properly grounded.


Do not modify the plug provided. If it will not fit the outlet, have the proper outlet installed by a qualified electrician,


If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation that is green or green with yellow stripes is the grounding wire.

Check the condition of the power supply wiring.

Do not permanently connect this product to wiring that is not in good condition or is inadequate for the requirements of this product.

Failure to follow these instructions can result in death, fire, or electrical shock.

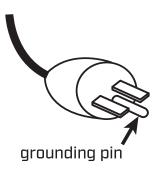

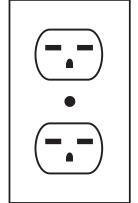

220/240-volt grounded connectors will differ in shape.

Model with a Power Supply Cord

This product must be grounded. For 220/240-volt circuits connect power supply cord grounding plug to a matching grounded outlet. Do not use an adapter. (See above diagram.)

In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product may be equipped with a power supply cord having a grounding wire with an appropriate grounding plug.

The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances

Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if you are not sure whether the product is properly grounded. Do not modify the plug provided. If it will not fit the outlet, have the proper outlet installed by a qualified electrician.

Model that is Permanently Wired

This product must be connected to a grounded, metallic, permanent wiring system, or an equipment grounding terminal or lead on the product.

Power supply wiring must conform to all required safety codes and be installed by a qualified person. Check that supply voltage agrees with that listed on product nameplate.

Extension Cords

Printed in the USA

Use only a 3-wire extension cord that has a 3-blade grounding plug. Connect extension cord plug to a matching 3-slot receptacle. Do not use an adapter. Make sure your extension cord is in good condition. Check that the gage wire of the extension cord is the correct size wire to carry the current this product will draw

An undersized cord is a potential fire hazard and will cause a drop in line voltage resulting in loss of power causing the product to overheat. The following table indicates the correct size cord

for length required and the ampere rating listed on the product nameplate. If in doubt, use the next heavier gage cord. The smaller the gage number, the heavier the wire gage.

Minimum gage for extension cords

Amps	Volts	Length of cord in feet													
	240v	50	100	200	300	400	500	600	800	1000					
0-2		18	18	18	16	16	14	14	12	12					
2-3		18	18	16	14	14	12	12	10	10					
3-4		18	18	16	14	12	12	10	10	8					
4-5		18	18	14	12	12	10	10	8	8					
5-6		18	16	14	12	10	10	8	8	8					
6-8		18	16	12	10	10	8	6	6	6					
8-10		18	14	12	10	8	8	6	6	4					
10-12		16	14	10	8	8	6	6	4	4					
12-14		16	12	10	8	6	6	6	4	2					
14-16		16	12	10	8	6	6	4	4	2					
16-18		14	12	8	8	6	4	4	2	2					
18-20		14	12	8	6	6	4	4	2	2					

OPFRATION

A WARNING

Injury Hazard

Install proper safety guards as needed.

Keep fingers and objects away from openings and rotating parts.

When provided, motor terminal covers must be in place for safe operation.

Product surfaces become very hot during operation, allow product surfaces to cool before handling.

Air stream from the product may contain solid or liquid material that can result in eye or skin damage, wear proper eye protection.

Wear hearing protection. Sound level from motor may exceed 70 dBA.

Failure to follow these instructions can result in burns, eye injury, or other serious injury.

It is your responsibility to operate this product at recommended pressures or vacuum duties and room ambient temperatures. **Do not start against a vacuum or pressure load.**

Start Up

If motor fails to start or slows down significantly under load, shut off and disconnect from power supply. Check that the voltage is correct for motor and that motor is turning in the proper direction. Check the plug, cord and switch for damage. If so equipped, the thermal protection switch has tripped, the motor can restart after cooling.

WARNING





Electrical Shock Hazard

Disconnect electrical power supply before performing maintenance on this product.

If product is hard-wired into system, disconnect electrical power at the circuit breaker or fuse box before performing maintenance on this product.

Failure to follow these instructions can result in death, fire, or electrical shock.

WARNING

Injury Hazard

Product surfaces become very hot during operation, allow product surfaces to cool before handling.

Air stream from the product may contain solid or liquid material that can result in eye or skin damage, wear proper eve protection.

Clean this product in a well-ventilated area.

Failure to follow these instructions can result in burns, eye injury, or other serious injury.

It is your responsibility to:

- Regularly inspect and make necessary repairs to product in order to maintain proper operation.
- Make sure that pressure is released from product before starting maintenance.

Check intake and exhaust filters after first 500 hours of operation. Clean filters and determine how frequently filters should be checked during future operation. This one procedure will help to assure the product's performance and service life.

- Disconnect electrical power supply to unit.
- Vent all air lines. 2.
- Remove filter cover. 3.
- Check filter element. Replace filter if element is covered with contamination or shows signs of increasing differential pressure.
- Reinstall filter element and filter cover.

Check that all external accessories such as relief valves and gauges are attached to cover and are not damaged before reoperating product.

SHUT DOWN

It is your responsibility to follow proper shutdown procedures to prevent product damage. NEVER ADD OIL TO THIS OIL-LESS PUMP.

Proper shutdown procedures must be followed to prevent pump damage. Failure to do so may result in premature pump failure. Gast Manufacturing Rocking Piston Oil-Less Pumps are constructed of ferrous metals or aluminum which are subject to rust and corrosion when pumping condensable vapors such as water. Follow the steps below to assure correct storage and shutdown between operating periods.

- Disconnect plumbing. 1.
- 2. Operate product for at least five minutes without plumbing.
- 3. Run at maximum vacuum for 10 to 15 minutes.
- 4. Repeat step 2.
- Disconnect power supply. 5.
- Plug open ports to prevent dirt or other contaminants from 6. entering product.

SERVICE KIT INSTALLATION





Electrical Shock Hazard

Disconnect electrical power supply before performing maintenance on this product.

If product is hard-wired into system, disconnect electrical power at the circuit breaker or fuse box before performing maintenance on this product.

Vent all air lines to release pressure or vacuum.

Failure to follow these instructions can result in death, fire, or electrical shock.

Gast will NOT guarantee field-rebuilt product performance. For performance guarantee, the product must be returned to a Gast Authorized Service Facility.

Gast offers the following Service Kits for the 106R compressor.

Description	Kit Number	Service Interval
106R Preventative Maintenance Kit	K1038	2000 hours or one year
106R6 Service Kit - Low Pressure	K1039	6000 hours or five years
106R5 Service Kit - High Pressure	K1040	6000 hours or five years
106R Capacitor Replacement Kit	K1041	Five years
106R Capacitor Cover	K1042	As needed
106R Spare Parts	K1043	As needed
106R Retrofit Parts for 0F302/0F312	K1044	As needed

- 1. Disconnect electrical power to pump.
- 2. Disconnect air supply and vent all air lines to release pressure or vacuum.
- 3. Consult individual kit instruction to install components

Check that all external accessories such as relief valves and gauges are not damaged before operating product.

If pump still does not produce proper vacuum or pressure, send unit to a Gast Authorized Service Facility for repair.

EXPLODED PRODUCT VIEW - 106R6 Parallel Configuration

1 1 1 1 1 1 1 1 1 1	The National Professional The National Professional Professional Professional The National Professional Professio	וע	= 1	J	۲	' ŀ	ł L	JI	J	J	ا ق		V	Ш	= '	W	-		IL	JE	h	(6		۲a	ar	a	Ш	e		انا	or	IT	Ig	Ju	r	aτ	IC	ın					
(a)	(a) 1 1 1 1 1 1 1 1 1	-	- -	- [-	_	2	-	-	-	6		- [-[-	-	-	-	2	_	_	-	2	-	-	-	_	-	- -	٦ ٦	- -	- -	-	- -	٠	- -	- 00	2	2	4	2		
		INDUNIN GOLVE	STATOR (NOOSK)	ROIOR (Neuda)	BODY, TAPPED	BODY, THRU	BEARING	VALVE PLATE ASM.	VALVE PLATE, SINGLE, PORTS	VALVERETAINER	FAFVAIVE	20 CLEAN TO 1877	VALVE LIMITER-35	SBHCS #6-32 X .25 THD ROLLING TORX	SBHCS #6-32 X .38 THD ROLLING TORX	VALVE PLATE ASM.	VALVE PLATE	VALVE RETAINER	LEAF VALVE	VALVE LIMITER-SS	SBHCS #6-32 X .25 THD ROLLING TORX	SBHCS #6-32 X .38 THD ROLLING TORX	ROD ASSEMBLY	CUP	BEARING	RETAINER	CONNECTING ROD	CELECT	SERIES	SET SC DEW 174 20 V 39	SELSCREW 1/4-20 A :30	ŽĮ Z	Z	MAT NATIONAL OF THE PROPERTY O	מאַבון	HEAU HWHS #8-32 X 38 SEMS SELE TAPPING	BHCS - #10-32 x 1 3/4" I ONG (HEX DRIVE)	O-RING	1/4 PLUG WITH O-RING	PIPE PLUG 3/4 NPT	O-RING	<u>(i)</u>	
		(VOOM) GOTATS	POTOB (NEGOX)	KOLOK (NOUOA)	BDY1600A	BDY1600B	A1816A	VPA1600A2	VPL1600A	AF819A	AH693	2301104	APLIUSS	AP304	AP305	VPA1600A1	VPL1600A	AF819A	AH693	AP110SS	AP304	AP305	CRA1600	6289551	AT147	CRP1600	CNR1600	FCC1600	SCR1502	SCK1302	CVITAGO	AT259A	AT260A	A1200A FAC1400	9001001	HUC I 600B	SCR1503	ORG1502	7167201	BA507	AT276		
					2	3	4	5								9							7									00	0	. 0	2 =	2 =	<u> </u>	14	15	91	17		
																														(<u> </u>										(-		
																														`		\		1		$\overline{\cap}$	<u> </u>						,
																													(e)	\ _	\	\		<i>)</i>	Ľ		_	<i>)</i> () —) 			
																0	0	0	-	_) •		' 4	}				7	\(\)	ø	.					(e)
																					9																			C	2	MI SERIOR STATE OF THE SERIES	
													((=)	6	8 			7	,																				- A.	/ 🛌)
									(2)	(:)					\	\					1			(%)	2															(1	`		,
												0		_		Ty E		y))		<u></u>			_				<u>-</u>				_			•		~	Ć				
														_]	<u> </u>	7	((5)		(<u>+</u>			$\bigg)$			\int	_		⊕ ⊕ —	9 ((=£				
													(19)																								(L N	
																																	,	\sim	`		Ð	\langle	Z.	<u>5</u>	}	6	
																																	(٣	\langle		/			-		T sh	
																																	(٣	<u></u>		< _					itor NOT sh	
			I NOON ACTATA	OR (NGOOX) STATOR (NGOOX) 1	STATOR (N600X) STATOR (N600X) ROTOR (N600X) ROTOR (N600X)	STATOR (N4600X) STATOR (N4600X) 1	STATOR (N600X) STATOR (N600X) 1	STATOR (N600X) STATOR (N600X) 1	STATOR (N600X) STATOR (N600X) 1	STATOR (NAGOX) STATOR (NAGOX) 1	STATOR (N600X) STATOR (N600X) 1	STATOR (N600X) STATOR (N600X) TOTOR (N60	STATOR INGOXI STATOR INGOXI 1	STATOR (NAGOX) STATOR (NAGOX) 1	STATOR (N600X) STATOR (N600X) 1	STATOR (N600X) STATOR (N600X) 1	STATOR (N600X) STATOR (N600X) 1	STATOR (N4600X) STATOR (N4600X) 1	The control of the	13 19 19 19 19 19 19 19	STATOR (NAGOX) STATOR (NAGOX) 1	STATION STATIAN STATION STAT	STATOR (NAGOX) STATOR (NAGOX) 1	STATIOR (NADOX) STATIOR (NATIVE INTERSS) STATIOR (NATIVE INTERSSS) STATIOR (NATIVE INTERSSE (NATIV	STATOR (NGODY) STATOR (NGODY) 1	STATOR (NAGON) STATOR (NAGON) 1	STATOR (NADOX) STATOR (NADOX) 1	STATOR (NADOX) STATOR (NADOX) 1	STATOR (NADON) STATOR (NADON) 1	STATOR (N600X) STATOR (N600X) 1	STATOR (NADON) STATOR (NADON) STATOR (NADON)	STATOR (NADON) STATOR (NADON)	STATOR (NADON) STATOR (NADON) STATOR (NADON)	STATOR (NEODA) STATOR (NEODA) TOTOR (NEO	STATOR NADOR NAD	STATOR (NADOR) STAT	STATION NAME	STATOS (NESCON) STATOS (NE	STACOR (MADO) STACOR (MADO	STATION NAME STATION STATION	STATION MACRO MA	STATION STAT	Control Cont

EXPLODED PROP	DUCT VIEW - 106R5 Staged Configuration
QŢŸ.	
DESCRIPTION MOTOR ASM. STATOR INGOX) ROTOR (NGOX) ROTOR (NGOX) BODY, TAPED BODY, TARU BEARING VALVE PLATE ASM. VALVE PLATE SINGLE, PORTS (2.50 CVL) VALVE RETAINER LEAF VALVE VALVE PLATES SINGLE, PORTS (2.50 CVL) VALVE RETAINER LEAF VALVE VALVE CONTRIBETS LEAF VALVE VALVE CONTRIBETS LEAF VALVE VALVE CONTRIBETS LEAF VALVE VALVE CONTRIBETS VALVE CONTRIBETS LEAF VALVE VALVE CONTRIBETS VALVE CONTRIBETS	SBHCS R6-32 X.38 THD ROLLING TORX VALVE PLATE VALVE PLATE VALVE PLATE VALVE BRATE COPP BEARING BEARING BEARING BEARING BEARING BEARING BEARING BEARING CONNECTING ROD CCONNECTING ROD CCONNECTING ROD CCONNECTING ROD CCONNECTING ROD ECCENTRIC SFHCS SFT SCREW 1/4-20 X.38 CCVINDER FAN FAN HEAD HEAD
TIEM NO. PART NUMBER	AP305
	apacitor NOT shown

TROUBLESHOOTING CHART

Low Pressure	High Pressure	Low Vacuum	Excessive Noise	Over- heating	Won't Start	Possible reason
×						Dirty filter
		×				Dirty muffler
×		×				Dirty valves – clean or replace
×		×				Bent/damaged valves – replace
×		×	×			Damaged/worn cup – replace
×		×	×			Leaky hose
×					×	Leaky check valve
	×	×		×	×	Plugged vacuum or pressure line
				×	×	Low voltage
×						Leaky relief valve
				×	×	Motor not wired correctly – check wiring diagram/line voltage

SERVICE AND MAINTENANCE CHART

Date	Problem	Technician	Notes

WARRANTY

Gast finished products, when properly installed and operated under normal conditions of use, are warranted by Gast to be free from defects in material and workmanship for a period of twelve (12) months from the date of purchase from Gast or an authorized Gast Representative or Distributor. In order to obtain performance under this warranty, the buyer must promptly (in no event later than thirty (30) days after discovery of the defect) give written notice of the defect to Gast Manufacturing Incorporated, PO Box 97, Benton Harbor Michigan USA 49023-0097 or an authorized Service Center (unless specifically agreed upon in writing signed by both parties or specified in writing as part of a Gast OEM Quotation). Buyer is responsible for freight charges both to and from Gast in all cases.

This warranty does not apply to electric motors, electrical controls, and gasoline engines not supplied by Gast. Gast's warranties also do not extend to any goods or parts which have been subjected to misuse, lack of maintenance, neglect, damage by accident or transit damage.

THIS EXPRESS WARRANTY EXCLUDES ALL OTHER WARRANTIES OR REPRESENTATIONS EXPRESSED OR IMPLIED BY ANY LITERATURE, DATA, OR PERSON. GAST'S MAXIMUM LIABILITY UNDER THIS EXCLUSIVE REMEDY SHALL NEVER EXCEED THE COST OF THE SUBJECT PRODUCT AND GAST RESERVES THE RIGHT, AT ITS SOLE DISCRETION, TO REFUND THE PURCHASE PRICE IN LIEU OF REPAIR OR REPLACEMENT.

GAST WILL NOT BE RESPONSIBLE OR LIABLE FOR INDIRECT OR CONSEQUENTIAL DAMAGES OF ANY KIND, however arising, including but not limited to those for use of any products, loss of time, inconvenience, lost profit, labor charges, or other incidental or consequential damages with respect to persons, business, or property, whether as a result of breach of warranty, negligence or otherwise. Notwithstanding any other provision of this warranty, BUYER'S REMEDY AGAINST GAST FOR GOODS SUPPLIED OR FOR NON-DELIVERED GOODS OR FAILURE TO FURNISH GOODS, WHETHER OR NOT BASED ON NEGLIGENCE, STRICT LIABILITY OR BREACH OF EXPRESS OR IMPLIED WARRANTY IS LIMITED SOLELY, AT GAST'S OPTION, TO REPLACEMENT OF OR CURE OF SUCH NONCONFORMING OR NON-DELIVERED GOODS OR RETURN OF THE PURCHASE PRICE FOR SUCH GOODS AND IN NO EVENTS HALL EXCEED THE PRICE OR CHARGE FOR SUCH GOODS. GAST EXPRESSLY DISCLAIMS ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE OR PURPOSE WITH RESPECT TO THE GOODS SOLD. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTIONS SET FORTH IN THIS WARRANTY, notwithstanding any knowledge of Gast regarding the use or uses intended to be made of goods, proposed changes or additions to goods, or any assistance or suggestions that may have been made by Gast personnel.

Unauthorized extensions of warranties by the customer shall remain the customer's responsibility.

CUSTOMER IS RESPONSIBLE FOR DETERMINING THE SUITABILITY OF GAST PRODUCTS FOR CUSTOMER'S USE OR RESALE, OR FOR INCORPORATING THEM INTO OBJECTS OR APPLICATIONS WHICH CUSTOMER DESIGNS, ASSEMBLES, CONSTRUCTS OR MANUFACTURES.

This warranty can be modified only by authorized Gast personnel by signing a specific, written description of any modifications.

Gast Manufacturing

2300 M139 Highway Benton Harbor, MI 49023

Ph: 269-926-6171 Fax: 269-927-0808

Gast Group Ltd.

Gast Jun-Air Europe B.V Hengelderweg 24 NL-6942 NB,Didam The Netherlands Phone +44(0)1527 504040

IDEX Technology (Suzhou) Co., Ltd

No.51 TangBang Road CaoHu Boulevard Xiang Cheng District Suzhou, China 215131 Phone (86) 512 6283 3000

