



Operation and Maintenance Manual

Cabinet Systems

106R-4M, 106R-25M, 106R-25MQ2,
2x106R-40M, 2x106R-40MQ2

Jun-Air®
powered by **gast**



Additional Languages.



Declaration of Conformity.

gastmfg.com

Dear Customer:

Congratulations on the purchase of your new air compressor system. It is intended to be used in various commercial and industrial applications where compressed air is needed.

 WARNING



PLEASE READ THIS MANUAL COMPLETELY BEFORE INSTALLING AND USING THIS PRODUCT. SAVE THIS MANUAL FOR FUTURE REFERENCE AND KEEP IN THE VICINITY OF THE PRODUCT.

TABLE OF CONTENTS

Safety.....4

Installation 6

Operation 7

Maintenance 8

Fault Finding and Repair 10

Technical Data and Specifications.....11

Performance Curves.....12

Electrical Drawings 14

Pneumatic Diagrams 17

Service Kits 21

Feature Diagrams.....22

Symbols 30

Potential Warning Labels on Product.....31



Warranty.....33

SAFETY



CAUTION:



REMOVE WHITE PACKAGING FOAM FROM INSIDE OF CABINET BEFORE OPERATION TO PREVENT DAMAGE TO THE UNIT AND SERIOUS INJURY.

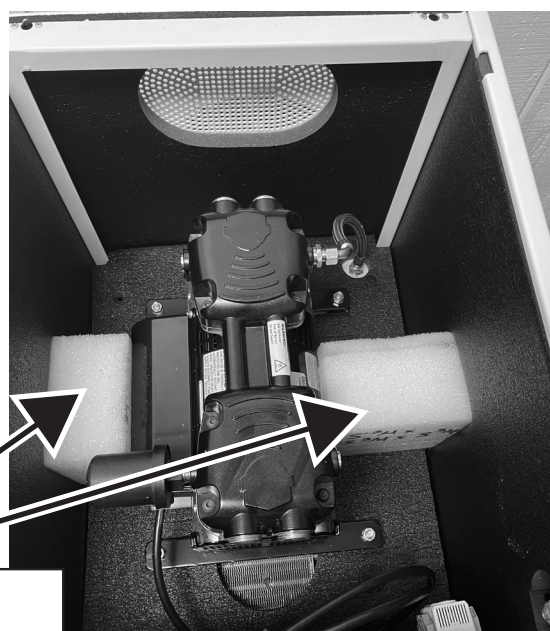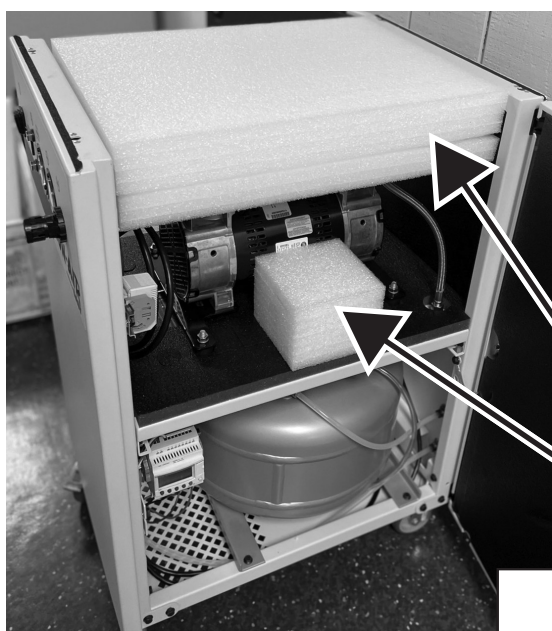

FOAM TO BE REMOVED

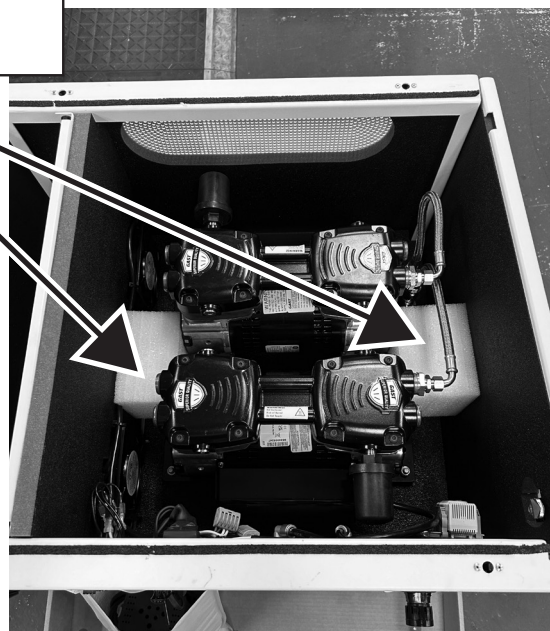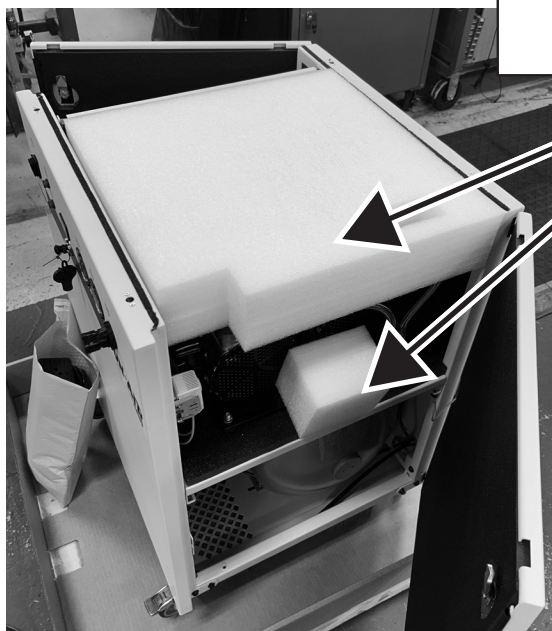

SAFETY

Important - read this first!

Please read the following information and operating instructions included with this product before use. This information is for your safety and it is important that you follow these instructions. It will also help prevent damage to the product. Failure to operate the unit in accordance with the instructions or using Jun-Air® unauthorized spare parts can cause damage to the unit and could cause serious injury.

SCAN COMPRESSOR MODEL LABEL QR CODE TO VIEW SYSTEM SPECIFICATIONS AND O&M MANUAL AVAILABLE IN OTHER LANGUAGES OR VISIT <https://www.gastmfg.com>.

⚠ IMPORTANT: General instructions for installation

- If the compressor is not fitted with a supply plug, a circuit breaker must be incorporated in the fixed wiring.
- If this unit is supplied with a three-pin plug, connect with a properly grounded outlet only.

⚠ CAUTION: To reduce risk of electric shock

- Only authorized service agents should carry out service. Removing parts or attempting repairs can create an electric shock. Refer all servicing to qualified service agents.

⚠ WARNING: To reduce risk of electrocution

- Do not use this unit with electrical voltages other than stated on the rating plate.
- Always unplug this unit immediately after use and store in a dry place.
- Do not use this product in or near liquid or where it can fall or be pulled into water or other liquids.
- Do not reach for this product if it has fallen into liquid. Unplug immediately.
- This unit is not weatherproof. Never operate outdoors in the rain or in a wet area.


⚠ DANGER: To reduce risk of explosion or fire

- During spraying with combustible liquids, risk of explosion may arise, particularly in closed rooms.
- Do not use this product in or near explosive atmospheres or where aerosol products are being used.
- Do not pump any other gases other than atmospheric air.
- Do not pump combustible liquids or vapors with this product; do not use it in or near areas with combustible or explosive liquids or vapors.
- Do not use this unit near open flames.

⚠ CAUTION: To prevent injury

- Compressed air can be dangerous; do not direct airflow at a person's head or body.
- Always keep the system out of reach of children.
- Never operate this product if it has a damaged power lead or plug, if it has been dropped or damaged, or if it has fallen into water. Return the product to a service center for examination and repair.
- Keep the electrical cable away from hot surfaces.
- Ensure all openings are kept free of restriction, and never place the motor on a soft surface where the openings may be blocked. Keep all openings free from dust, dirt and other particles.
- Never leave this product unattended when plugged in.
- Never insert fingers or any other objects into fans.
- This unit is thermally protected and can automatically restart when the overload resets.
- Wear safety glasses, when servicing this product.
- Use only in well-ventilated areas.
- This product may only be connected to units or tools with a maximum pressure rating higher or equal to that of the compressor.
- The surface of the compressor can get hot. Do not touch compressor motor during operation.

Failure to observe the safety precautions could result in severe bodily injury, including death in extreme cases.

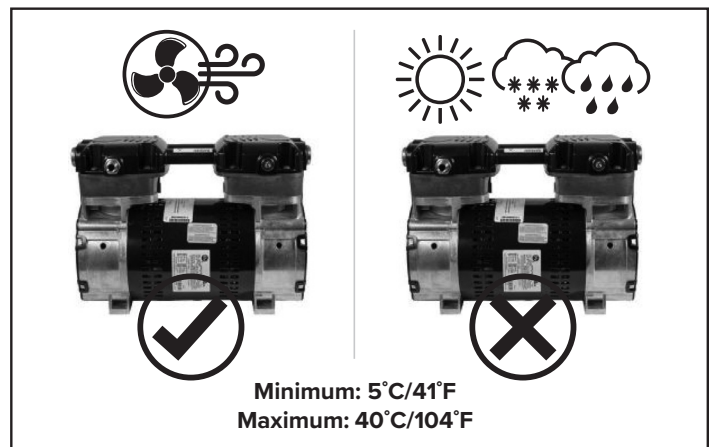

⚠ IMPORTANT: General directions for use

- Protect compressor against rain, moisture, frost and dust.
- The compressor is constructed and approved for a maximum pressure as stated under Technical Specifications.
- Do not operate the compressor at ambient temperatures exceeding 40°C/104°F or falling below 5°C/41°F.
- If the supply power lead on the compressor is defective, an authorized Jun-Air® distributor or other qualified personnel must carry out the repair.

INSTALLATION

Your Jun-Air® compressor is easy to operate. Observe the instructions and you will get many years service from your compressor.

- Visually inspect unit for shipping damage, contact your supplier immediately if you think the unit may have been damaged.
- Check that the performance of the compressor matches the actual air consumption, please refer to Technical Specifications.
- Check that the rating plate of the compressor corresponds with the electrical voltage offered and check that fusing is adequate.

Unpacking

1. Cut the banding strap from the carton and remove the lid and cardboard inserts.
2. Visually inspect the entire system for shipping damage and verify that the accessories have been included:
 - a. If the contents were damaged during shipping, contact the freight carrier to file a claim.
 - b. If parts are missing, contact the supplier.
3. Use caution when removing the system from the remaining packaging. Retain the packaging material for future use, if necessary.

Placing

Place the compressor in a dust-free, dry and cool, yet frost-free room. Sufficient cooling from the surroundings is important.

- Ambient temperature: 5°C to 40°C, 41°F to 104°F
- Relative humidity: Maximum 90%

Mount the two distance bolts (1) on the back of the cabinet to ensure sufficient ventilation.


Installation

- Mount the drain bottle (2) visibly outside the cabinet and mount the hose at the back of the cabinet (3).
- Connect the cable at the back of the cabinet (5).
- Plug the compressor into a standard outlet switch.
- Connect equipment at the back of the cabinet (4).
- The front wheels are delivered with brakes. Brake the wheels before starting the compressor (6).

Thermo Switch

The fans are controlled by a Stego thermo switch adjusted to 30°C from the factory – do not alter this setting. Check that the setting is correct and adjust if necessary.


The fans will start when the temperature inside the cabinet exceeds 30°C and will run continuously until the temperature drops below 30°C.

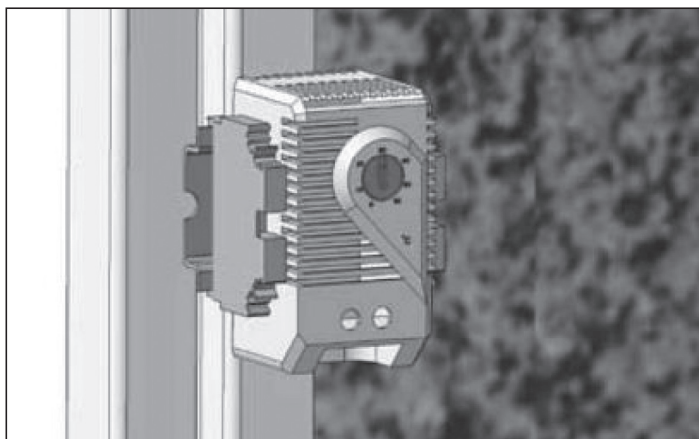

Transportation and Storage Conditions

- Temperature: -25°C (-13°F) to 55°C (131°F)
- Relative humidity: 90% maximum
- Keep the system dry at all times.
- Do not stack units during shipment, installation, or usage.

Unit must be on level surface to ensure stability during use, transport, assembly, and servicing.

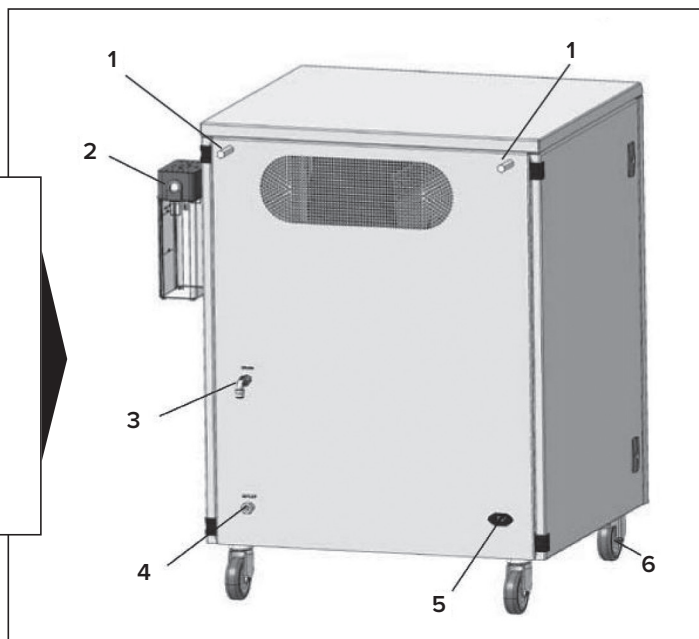

OPERATION

- If the compressor has been stored at an extremely low temperature, allow it to heat to room temperature before switching it on.
- The cut-in and cut-out pressure is preset from the factory and it is normally not necessary to change this. However, if it is necessary to change the preset settings, the instructions of this manual shall be followed carefully.
- All AC compressors are designed for 100% duty, but 50% operation is recommended to prolong the lifetime.
- The fans on the back of the cabinet will start when the temperature exceeds 30°C. It will run continuously even if the compressor may have switched off until the temperature is below 30°C again.
- Do not lubricate the oil-less motor with oil, as it will destroy important components.



Start

-  Start the compressor by pressing the green button.
-  The green lamp for compressor in operation is now lit.
-  Read the outlet pressure on the pressure gauge.
-  Adjust the pressure on the regulator.
-  Read the receiver pressure on the pressure gauge.
-  The green lamp is lit when the fans are in operation.

Read on the hour counter the elapsed service time.

If the compressor does not start, there might be pressure in the receiver. The compressor will automatically start when the pressure drops.


The compressor will automatically stop when the preset cut-out pressure is reached.

Stop

-  Turn off the compressor by pushing the green button.
-  The green light for compressor in operation switches off.

MAINTENANCE

To ensure a long lifetime of the compressor, it is important that inspection and maintenance is carried out regularly as described in the following.

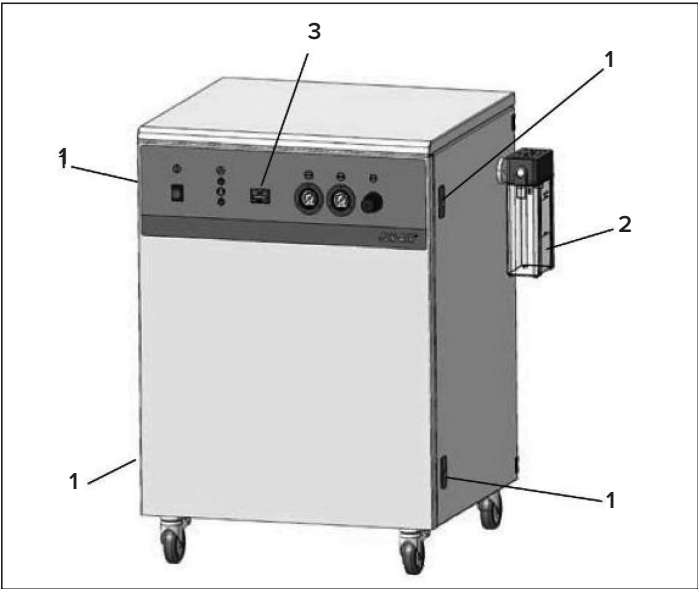

Read the elapsed operation time on the hour counter (3).

Opening of Cabinet

Turn the four (4) locks clockwise with a screwdriver or similar tool to open the cabinet.

Preventative Maintenance

	Activity	Weekly	Monthly	One a year, or every 2,000 hours
a	Drain condensate	•		
b	Check filter regulator			•
c	Check for leaks		•	
d	Clean the unit		•	
e	Check safety valve			•
f	Check inlet filter			•
g	Check non-return valve			•
h	Check fans	•		
i	Check dryer		•	

CAUTION

RISK OF BURSTING - OPEN DOOR
TO ACCESS DRAIN ASSEMBLY.

a) Drain condensate

If drain bottle is installed, empty when necessary (2).
Drain condensate by opening the manual drain on the receiver (1). If mounted with auto drain, condensate will be drained automatically.

b) Check outlet filter

Check and change the filter and filter element in accordance with the instructions in "Installation and maintenance instructions" for the filter in question.


c) Check for leaks

Check motor, hoses and equipment for leaks. Check the pumping time.

d) Clean the unit

Clean the unit when needed with a soft, damp cloth. If necessary, use paraffin to remove adhesions. Dust and dirt prevent cooling.


e) Check safety valve

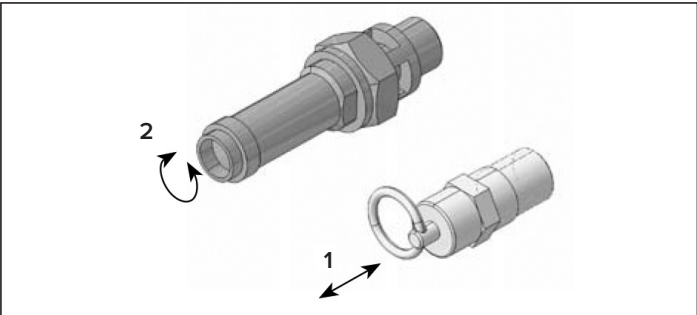

Check the safety valve with pressure in the receiver. The safety valve is operated by pulling the ring (1) or turning the screw (2) depending on the valve type.

f) Check intake filter


Check the intake filter and change it if necessary.

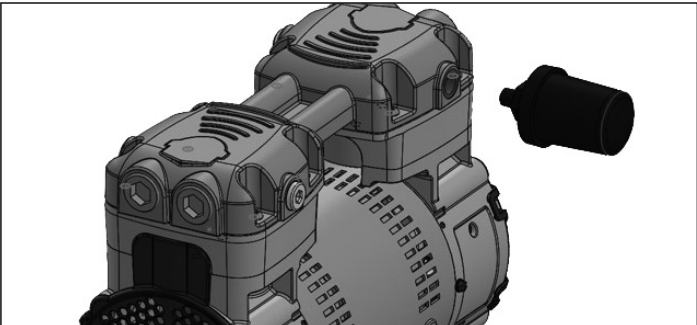

g) Check the non-return valve

Turn off the compressor on the main switch and pull out the plug.
Empty the receiver for compressed air by operating the safety valve. When the receiver is empty, the reading of the pressure gauge is 0 bar.
Dismount the non-return valve from the receiver.

MAINTENANCE

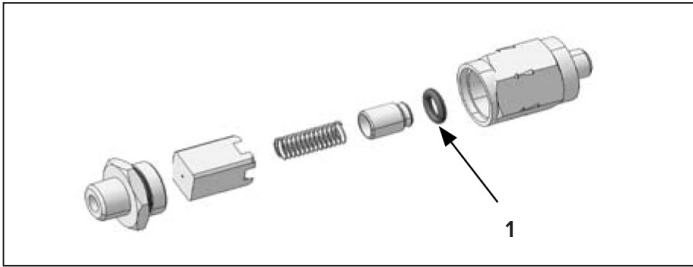

Disassemble the non-return valve and remove the O-ring (1) part no. 6243000 from the piston.

Clean the non-return valve.

Mount a new O-ring and re-assemble the non-return valve.

Re-install the non-return valve.

h) Check the fans

Check that the fans at the back of the cabinet work. They will start when the temperature exceeds 30°C and will run continuously until the temperature falls below 30°C.


i) Check dryer

If a dryer is installed refer to the operating manual for the dryer. Please note that all service must be carried out by a qualified person.

Adjustment of Pressure Switch

The working pressure has been preset from the factory, and it is normally not necessary to change this.

However, if it is necessary to change the preset settings, the instructions mentioned below should be followed carefully.

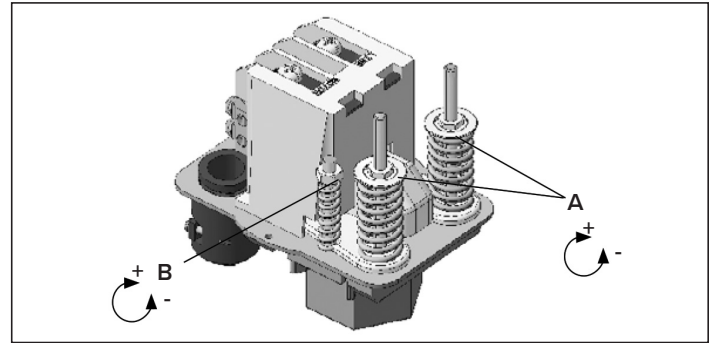

Unscrew the lid of the pressure switch. Adjust maximum pressure adjusting the two springs marked A (clockwise: higher pressure). Adjust the two springs identically.

Adjust the differential pressure adjusting the spring marked B (clockwise: higher differential pressure, start pressure maintained).

Test of Pumping Time

The pumping time indicates the condition of the compressor.

1. Check that there are no leaks in the system.
2. Empty the air receiver of compressed air so that the pressure gauge shows 0 bar.
3. Close the filter regulator and check that the drain valve is closed.
4. Start the compressor and note the time it takes until it is turned off again by the pressure switch. Check that the pumping time agrees with the technical specifications for the actual compressor system.

Please note that the pumping time in this manual is given for 0 to maximum pressure. Deviations from this result in deviating results.

! WARNING



THE COMPRESSOR IS CONSTRUCTED AND APPROVED FOR A MAXIMUM PRESSURE AS STATED UNDER TECHNICAL SPECIFICATIONS - DO NOT ADJUST TO A HIGHER PRESSURE.

HIGHER WORKING PRESSURE WILL REDUCE THE LIFETIME OF THE COMPRESSOR.

The compressor will stop at maximum pressure (stop pressure) and start again at minimum pressure (start pressure). The difference between maximum and minimum pressure is the differential pressure.

IMPORTANT!



ALWAYS TEST THE PUMPING TIME WHEN COLD. IF THE COMPRESSOR IS WARM, THE PUMPING TIME WILL BE CONSIDERABLY LONGER.

FAULT FINDING AND REPAIR

IMPORTANT!



SWITCH OFF AND ISOLATE FROM ELECTRICAL SUPPLY BEFORE REMOVING ANY PARTS FROM THE PUMP. EMPTY AIR RECEIVER OF AIR BEFORE PERFORMING ANY OPERATION ON THE COMPRESSORS' PRESSURE SYSTEM.

1. Compressor does not start

- The air receiver is pressurized. The motor will start when the pressure has dropped to the preset start pressure. Empty the receiver.
- Check that the mains supply agrees with the motor label.
- No power from mains. Check fuses and plug.
- Bad connection or broken cable.
- The motor is overheated and the thermal protection has switched it off. When cooled the motor will turn on automatically. Go to Section 4.
- The compressor has not been unloaded and there is back pressure on the piston. Ensure that the compressor is unloaded each time it stops.
- The motor is blocked.
- Defective capacitor.

2. The compressor makes a buzzing sound but does not start

- Leaky non-return valve. Dismount the pressure pipe and check if air leaks from the non-return valve. Clean and replace.
- The motor is blocked.

3. The compressor runs but the pressure does not increase

- Intake filter clogged. Replace.
- Non-return valve is clogged. Clean or replace.
- Leaks in fittings, tubes or pneumatic equipment. Check with soapy water or by letting unit stay overnight disconnected from mains. Pressure drop should not exceed 1 bar.
- Check the piston gaskets. Replace if necessary.
- Defective valve plate. Contact your Jun-Air® distributor.

4. The motor gets very hot

- The ambient temperature is too high. If the motor is installed in a cabinet, sufficient ventilation must be ensured.

- Leaks in fittings, tubes or pneumatic equipment. Check with soapy water or by letting unit stay overnight disconnected from mains. Pressure drop should not exceed 1 bar.

- The compressor is overloaded.

5. The compressor runs even if no air is tapped

- Leaks in fittings, tubes or pneumatic equipment. Check with soapy water or by letting unit stay overnight disconnected from mains. Pressure drop should not exceed 1 bar.

6. The compressor does not start at minimum pressure or does not stop at maximum pressure

- Defective pressure switch. Replace.

PRESSURE VESSEL

Pressure tested at	4-25 liter 24 bar
	40-50 liter 18.3 bar

Directions for use

Application	Receiver for compressed air
Receiver specifications	See name plate
Installation	Tubes, etc. must be installed with suitable materials
Placement	Observe the working temperature of the receiver
	Ensure sufficient room for inspection and maintenance
Corrosion protection	The receiver must be kept in a horizontal position
	The surface treatment must be maintained as required
	Internal inspection at least every five years
Alternation/repair	Drain condensate at least once a week
	No welding must be made on pressurized parts
Safety valve	Ensures that PS will not be exceeded
	Never adjust to a higher pressure than PS
	The capacity of the valve must be calculated in accordance with the volume of air supplied by the compressor
	PS - Maximum working pressure of the receiver







TECHNICAL DATA AND SPECIFICATIONS

Specifications		106R-4M	106R-25M		106R-25MQ2		2x106R-40M		2x106R-40MQ2
Electrical rating	volts	120 V	120 V	230 V	120 V	230 V	120 V	230 V	230 V
Tank size	liter	4	25				40		
	U.S. gallon	1.1	6.6				10.6		
Weight	kg	46	80		84	85	108	106	111
	lbs	102	176		186	188	238	234	245
Dimensions (w x h x d)	mm	43.9 × 42.2 × 56.9	44.7 × 85.9 × 56.9		44.7 × 85.9 × 71.7		64 × 85.9 × 67.6		
	in	17.3 × 16.6 × 22.4	17.6 × 33.8 × 22.4		17.6 × 33.8 × 28.2		25.2 × 33.8 × 26.6		
Continuous System Output Flow @ 8 bar (116 psi) ¹	LPM	51	45.3	36.8 @ 50 Hz 45.3 @ 60 Hz	45.3	36.8 @ 50 Hz 45.3 @ 60 Hz	90.6	70.8 @ 50 Hz 90.6 @ 60 Hz	70.8 @ 50 Hz 90.6 @ 60 Hz
	CFM	1.8	1.6	1.3 @ 50 Hz 1.6 @ 60 Hz	1.6	1.3 @ 50 Hz 1.6 @ 60 Hz	3.2	2.5 @ 50 Hz 3.2 @ 60 Hz	2.5 @ 50 Hz 3.2 @ 60 Hz
Cut-in Pressure	bar	6							
	psi	87							
Cut-out Pressure	bar	8							
	psi	116							
Maximum Operational Pressure ²	bar	10							
	psi	145							
Air Filtration	µm	5							
Safety Relief Valve Pressure	bar	11							
	psi	160							
Sound Level	dB(A)	52 to 58	50 to 58	49 to 57 @ 50 Hz 49 to 58 @ 60Hz	50 to 58	50 to 58 @ 50 Hz 53 to 59 @ 60 Hz	54 to 60	54 to 60 @ 50 Hz 54 to 61 @60 Hz	54 to 62 @ 50 Hz 54 to 64 @ 60 Hz
	(Sones)	10 to 14	8 to 11	7 to 11 @ 50 Hz 7 to 11 @ 60 Hz	8 to 13	8 to 13 @ 50 Hz 8 to 13 @ 60 Hz	10 to 13	10 to 13 @ 50 Hz 10 to 14 @ 60 Hz	10 to 13 @ 50 Hz 10 to 14 @ 60 Hz
Operating Temperature	°C	5 to 40							
	°F	41 to 104							
Operating Relative Humidity	%	20 to 80							
Pump Up Time (0 to cut out) ³	mm:ss	00:26	02:51	03:04 @50 Hz 02:32 @60 Hz	3:02	04:15 @ 50 Hz 03:07 @ 60 Hz	2:07	02:34 @ 50 Hz 02:07 @ 60 Hz	02:44 @ 50 Hz 02:18 @ 60 Hz





¹ Air flow is reduced by approx. 18-20% on units with dryer during purge cycle.² Maximum pressure not to exceed 10 bar/145 psi. Please note unit is certified at factory cut in and cut out pressure of 6 to 8 bar.³ At operating temperature

Technical modifications reserved.

PERFORMANCE CURVES

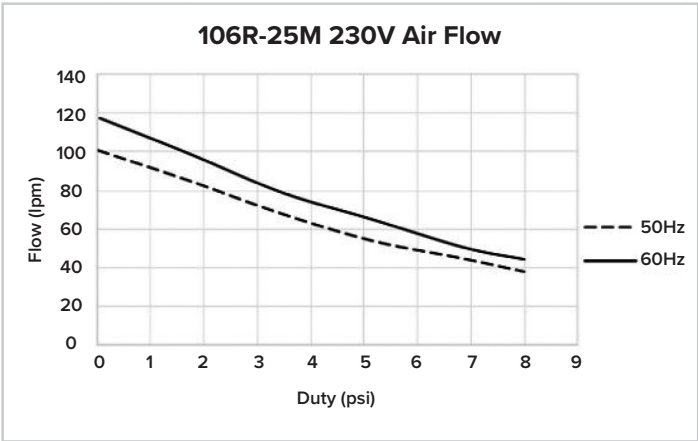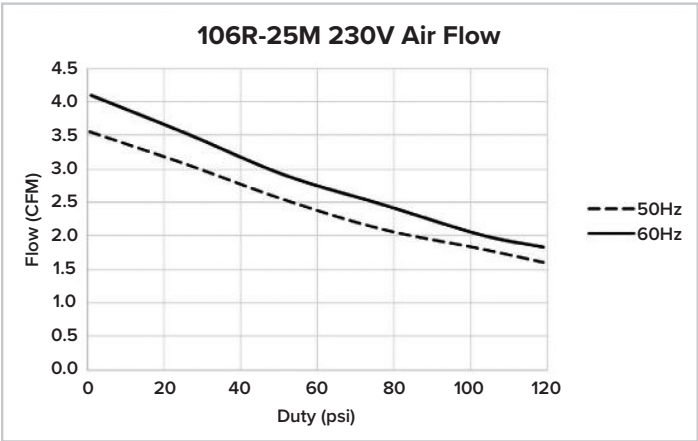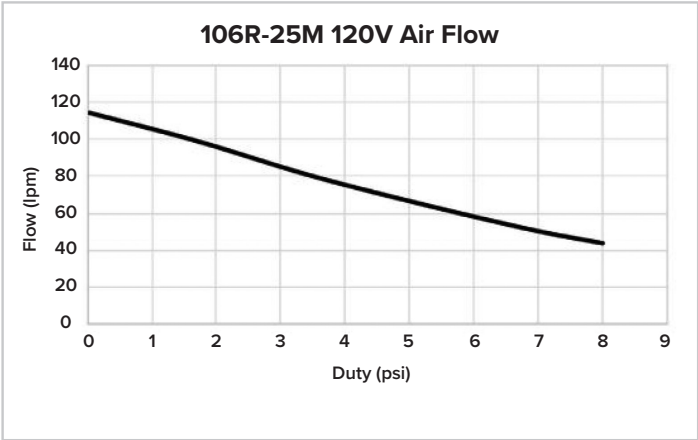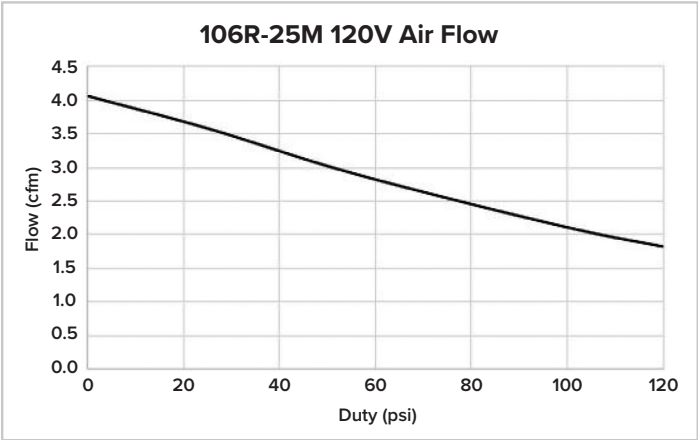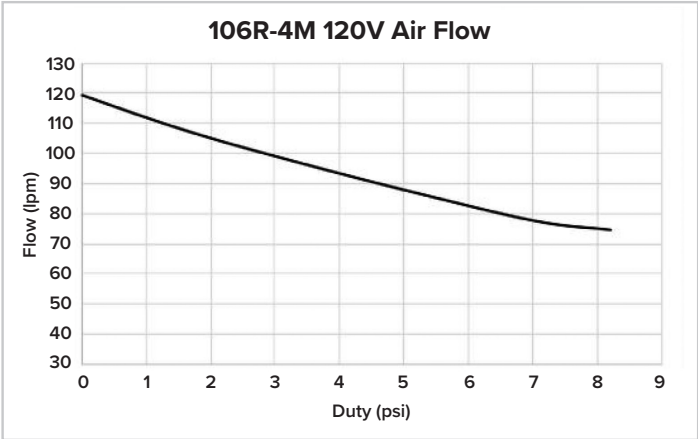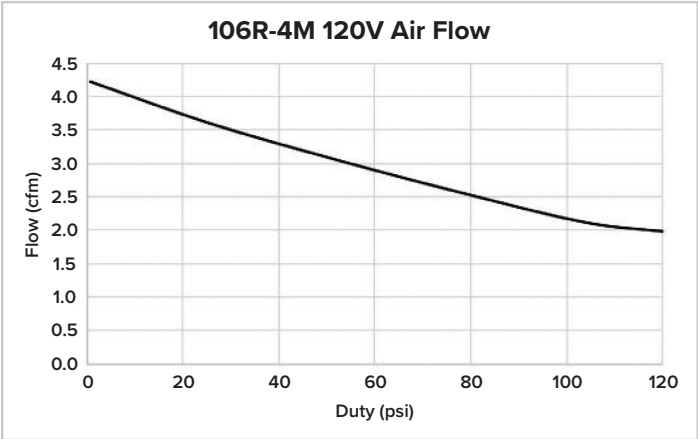


PERFORMANCE CURVES

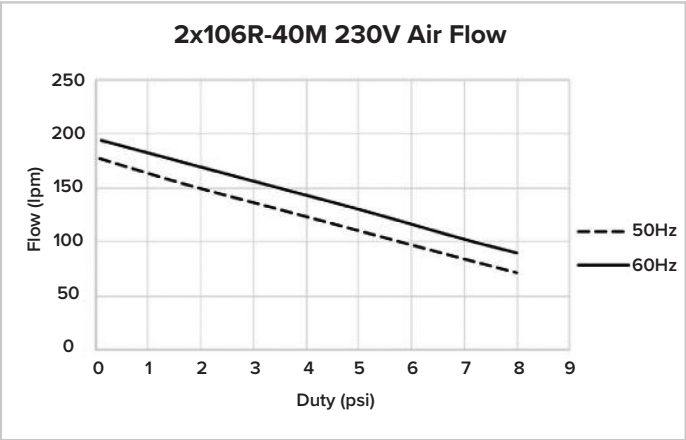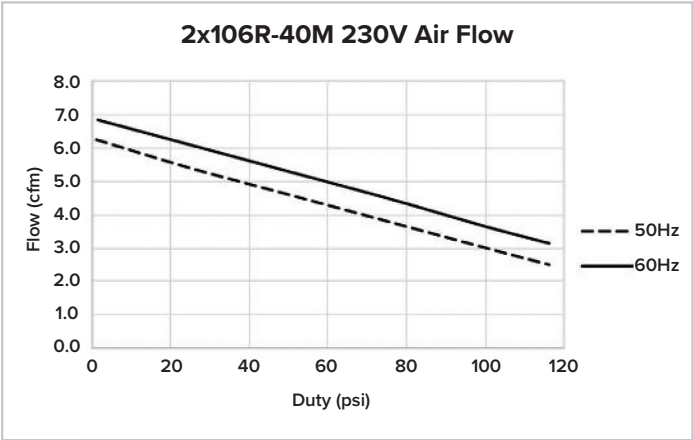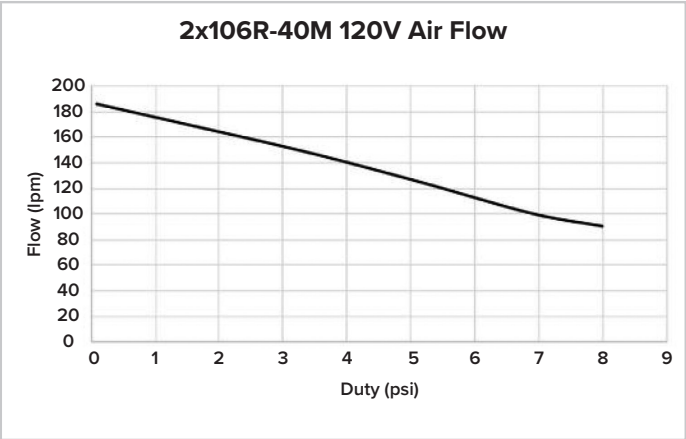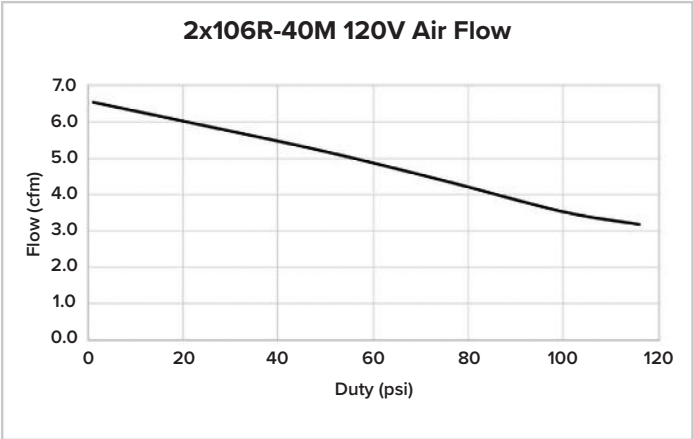


*Air flow is reduced by approx. 18-20% on units with dryer during purge cycle.

Models 106R-4M and 106R-25M

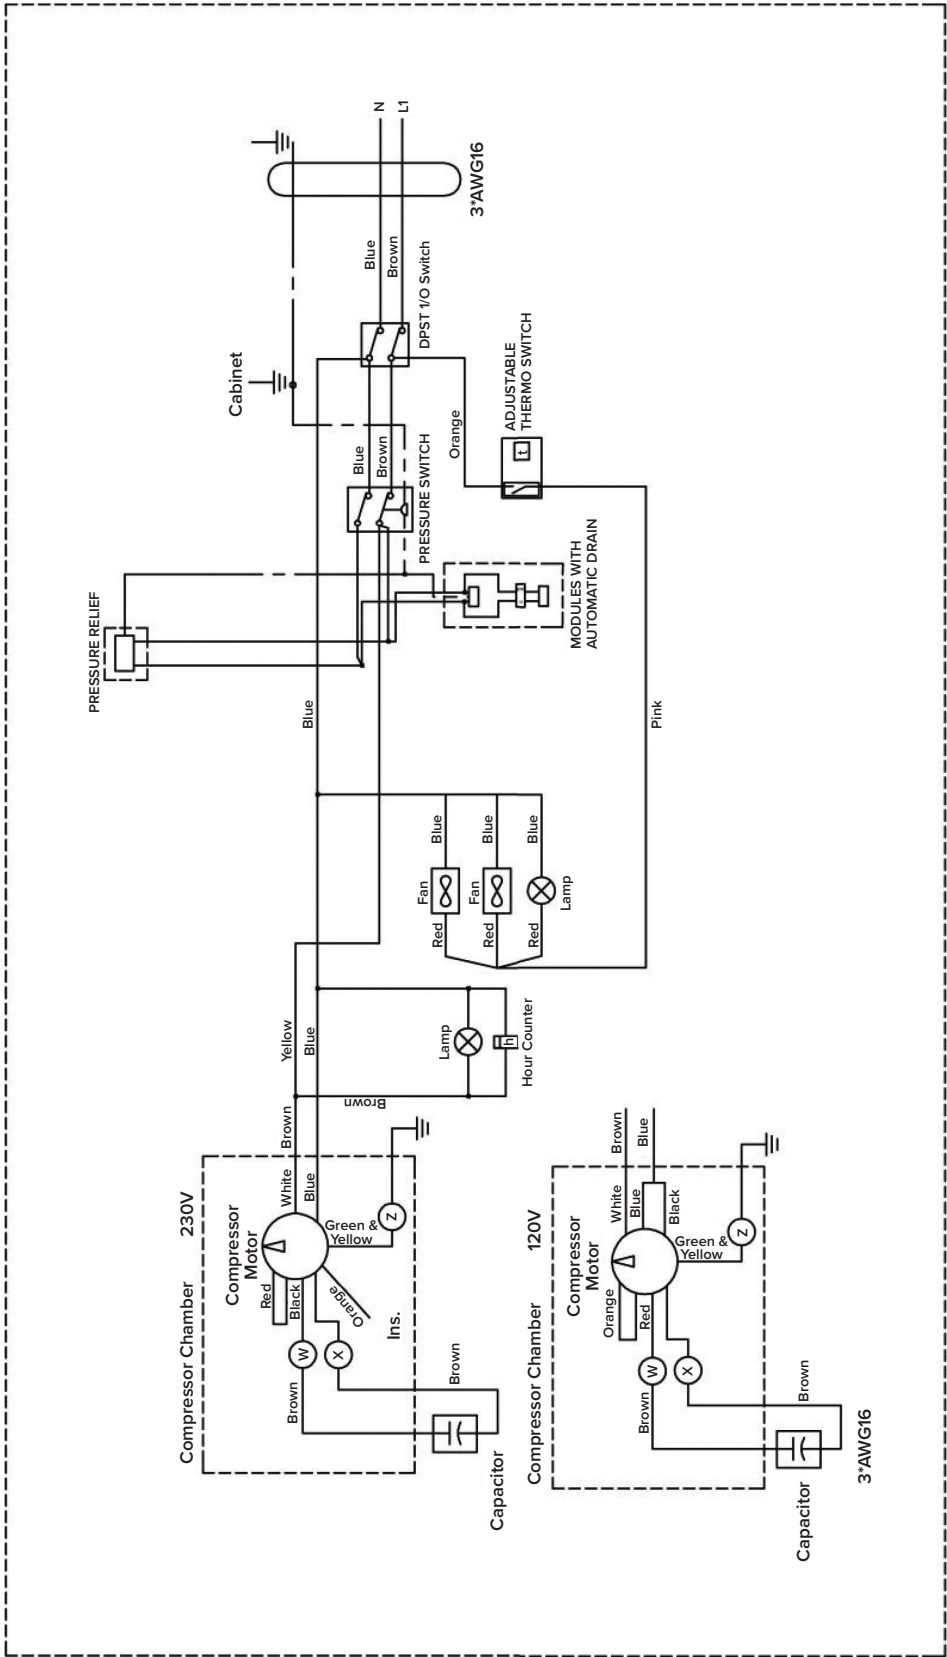


ELECTRICAL DRAWINGS

Models 106R-25MQ2 and 2x106R-40MQ2

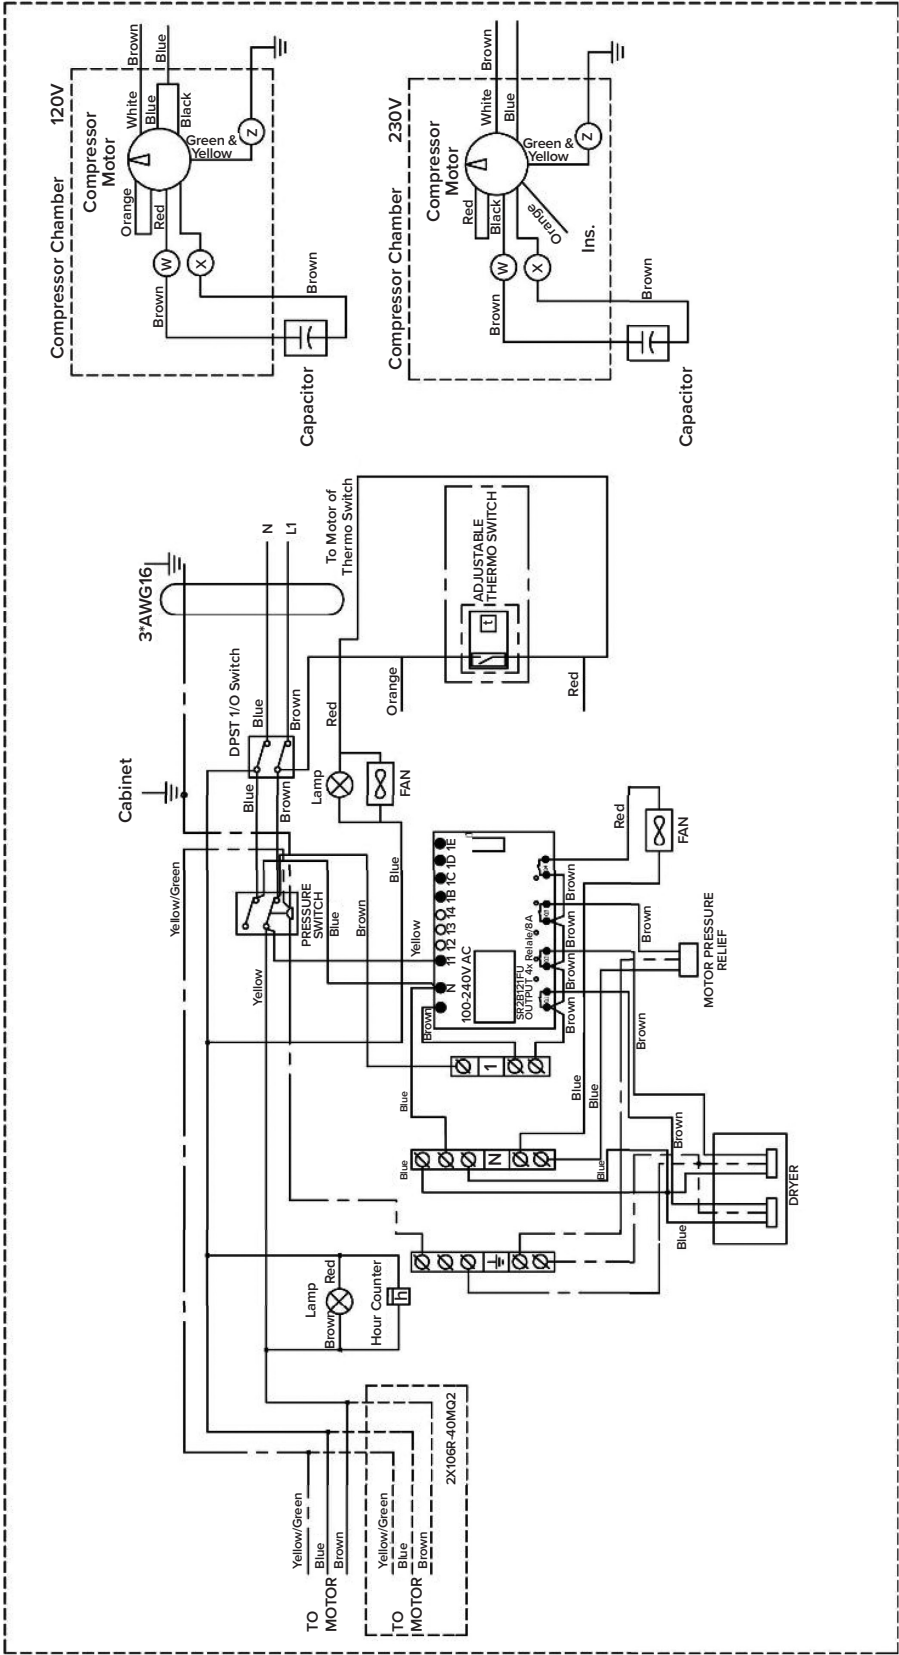


Model 2x106R-40M

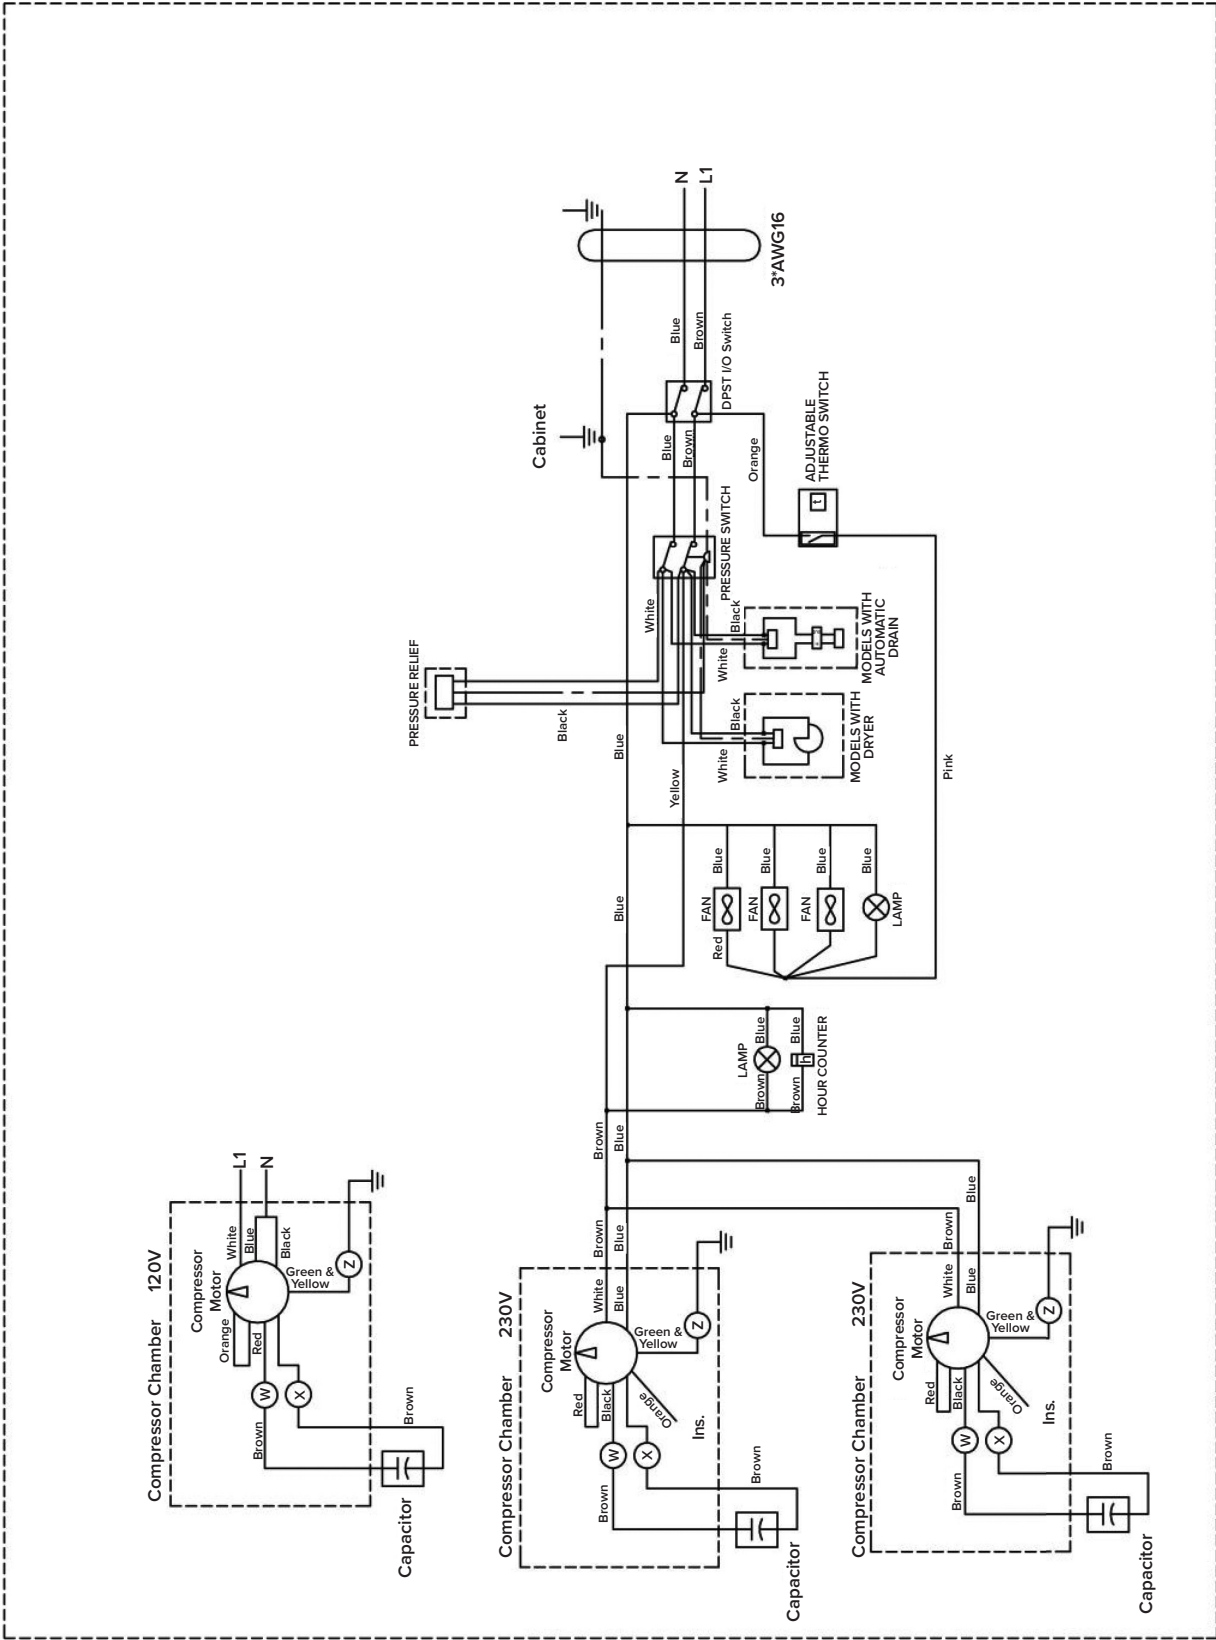


PNEUMATIC DIAGRAMS

Model 106R-4M

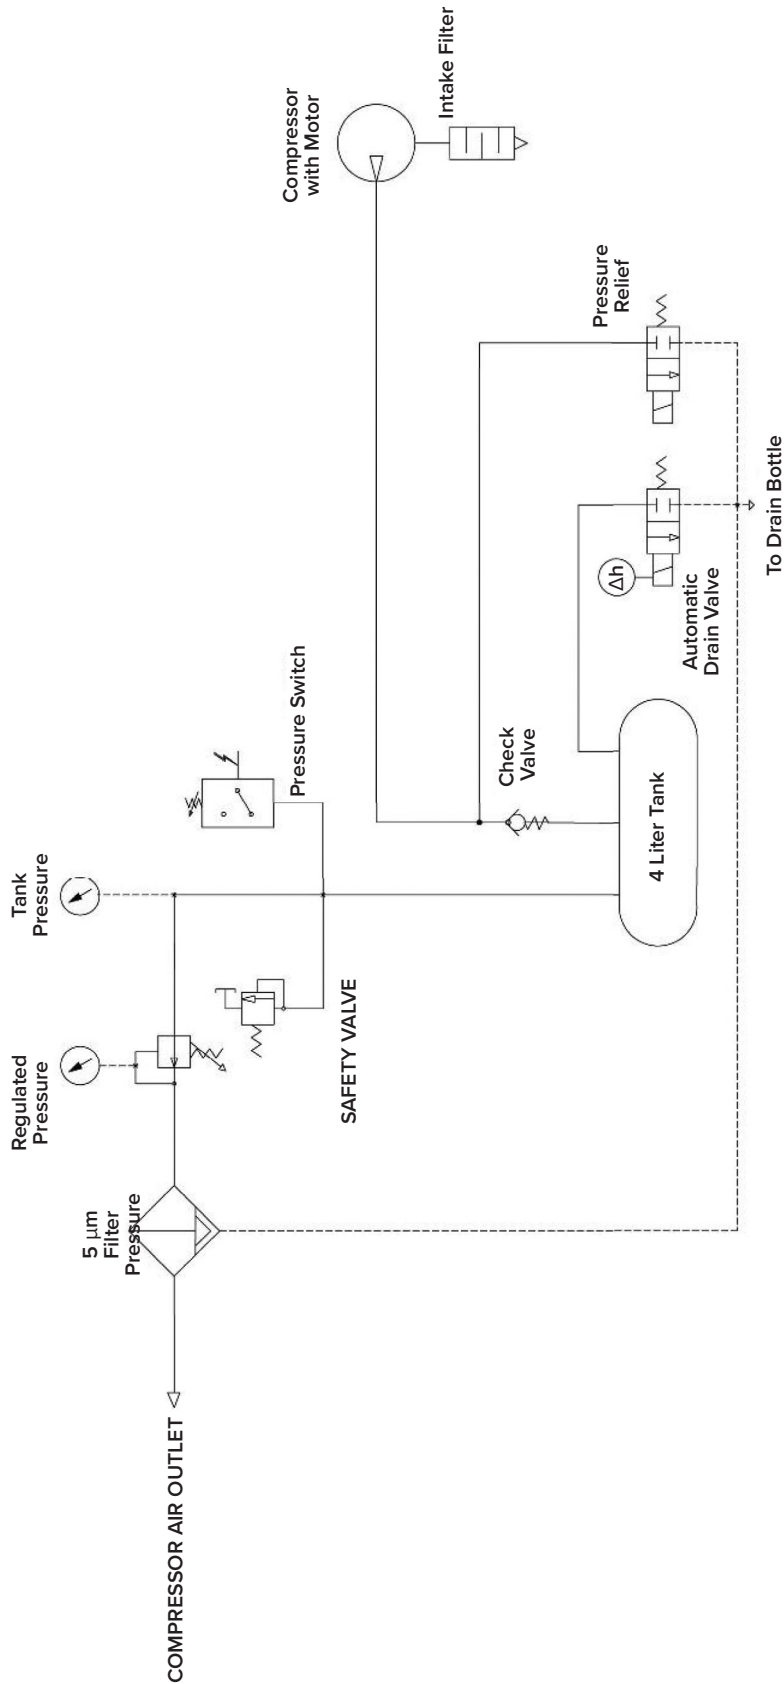


Model 106R-25M

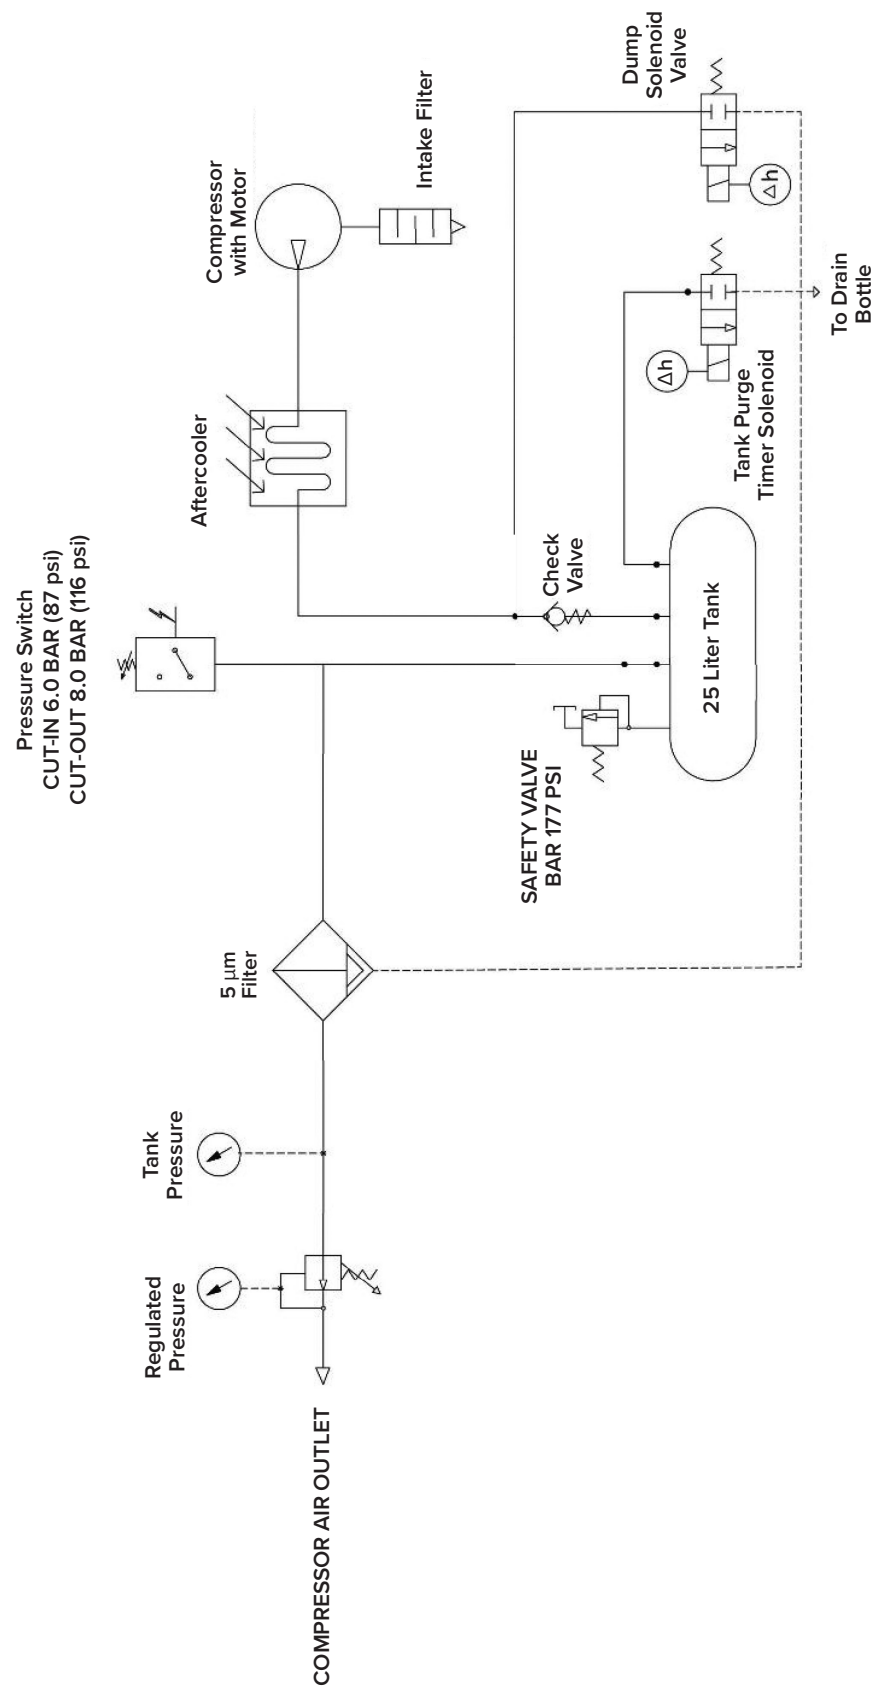


PNEUMATIC DIAGRAMS

Model 2x106R-40M

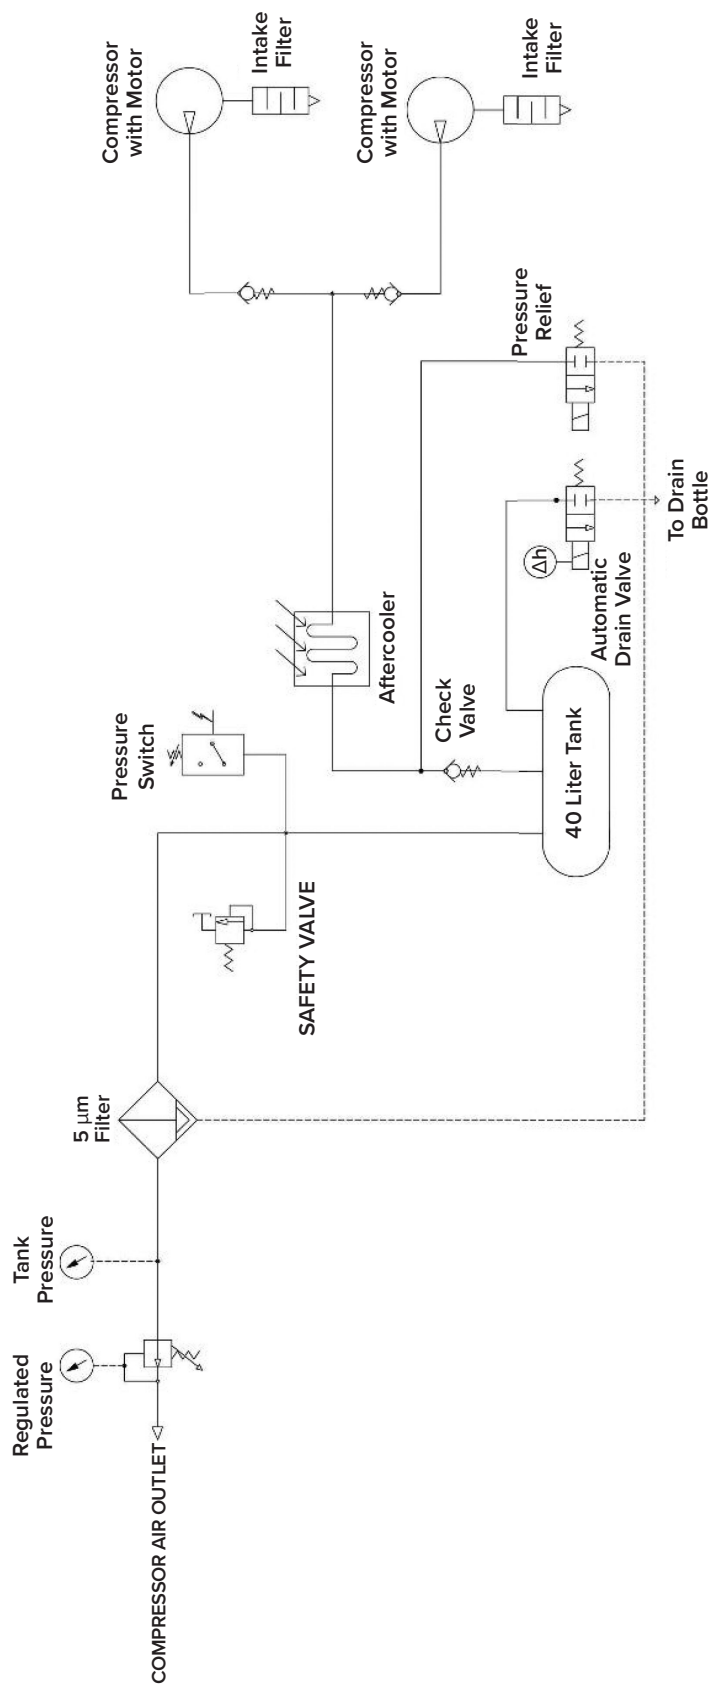

Models 106R-25MQ2 and 2x106R-40MQ2



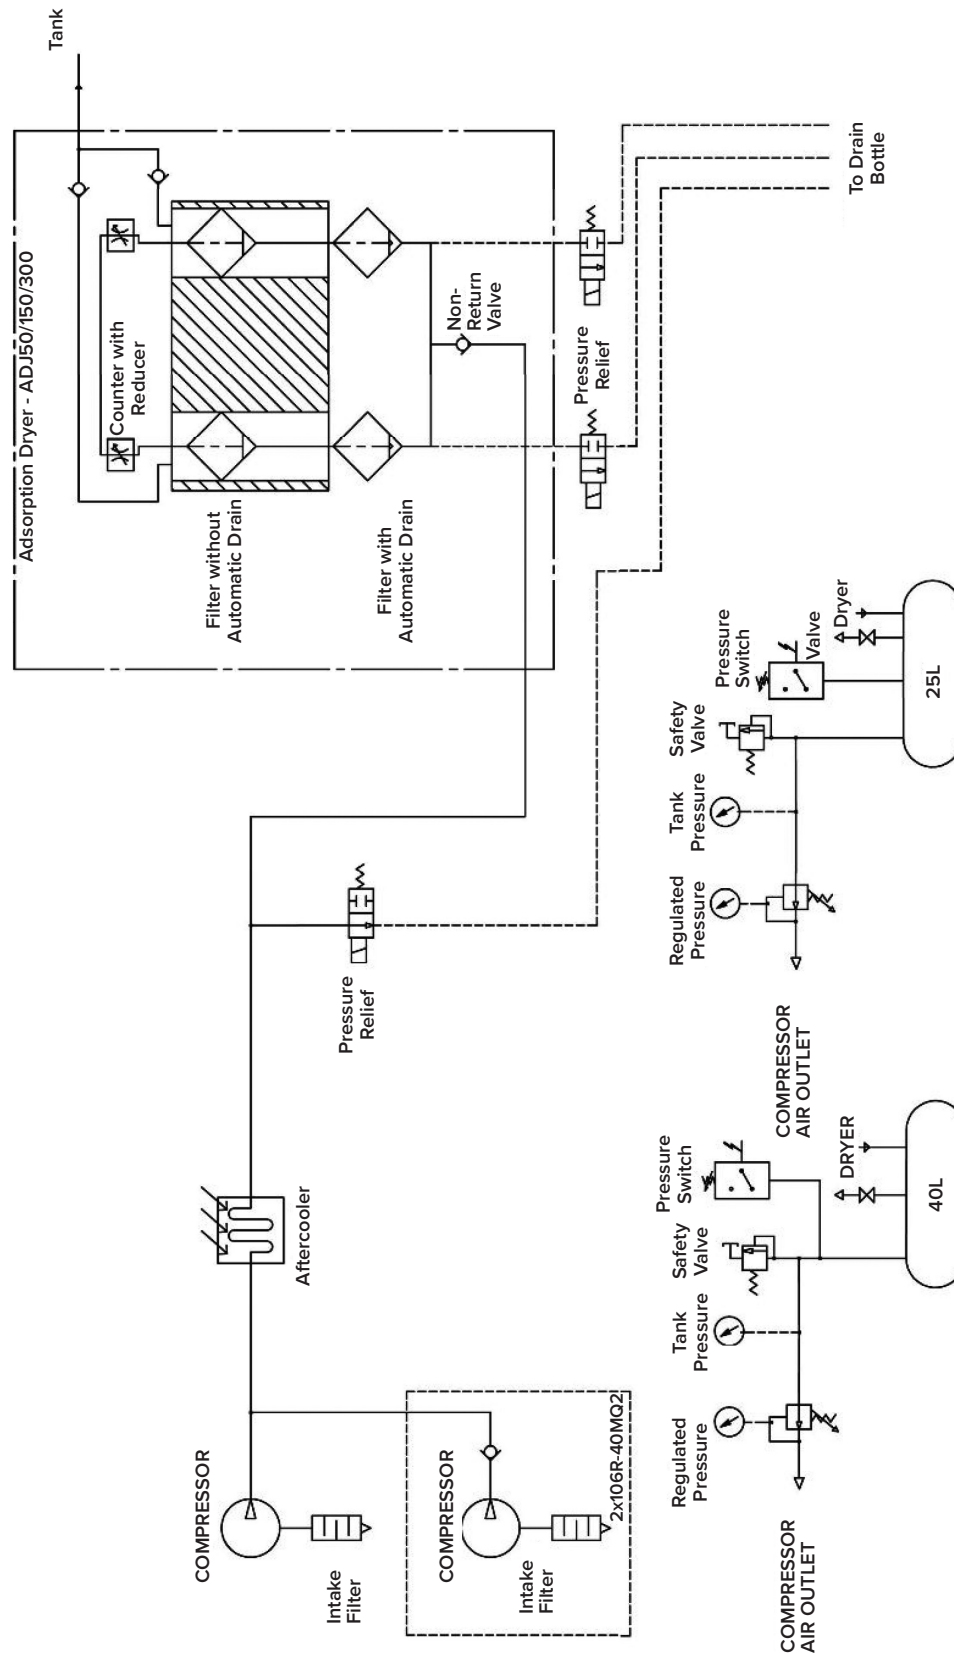


SERVICE KITS

Description	Kit Number	Service Interval
106R Preventative Maintenance Kit	K1038	2,000 hours or one year
106R6 Service Kit - Low Pressure	K1039	6,000 hours or five years
106R5 Service Kit - High Pressure	K1040	6,000 hours or five years
106R Capacitor Replacement Kit	K1041	Five years
106R Capacitor Cover	K1042	As needed
106R Spare Parts	K1043	As needed
106R Retrofit Parts for OF302/OF312	K1044	As needed
Single Cabinet System Outlet hose kit	K1046	As needed
Twin Cabinet System Outlet Hose Kit	K1047	As needed
Regulator Filter Kit	4071311	2000 hours or one year
Regulator Filter Bowl Automatic Drain Kit	4071340	As needed
4071321 PARKER Reg Kit	4071321	As needed


FEATURE DIAGRAMS

Model 106R-4M

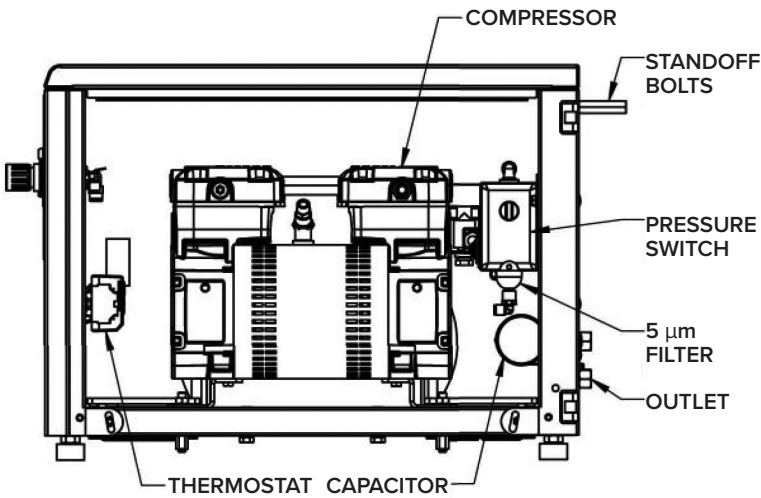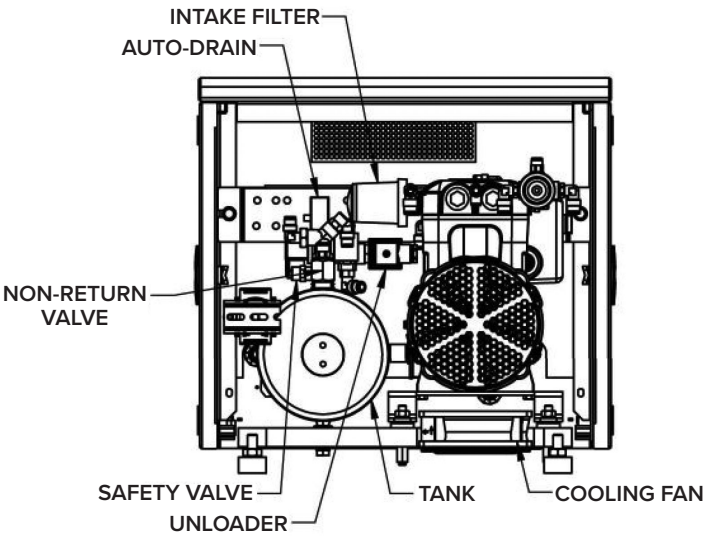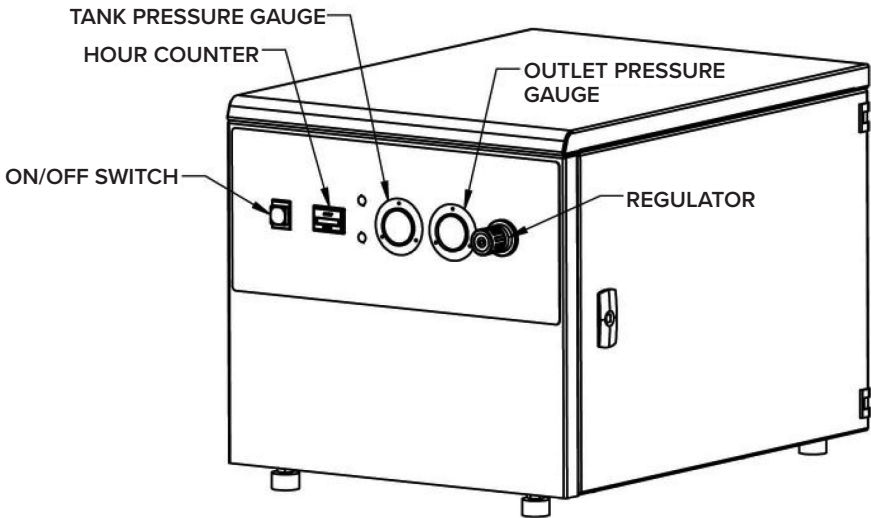



FEATURE DIAGRAMS

Model 106R-25M 120 V

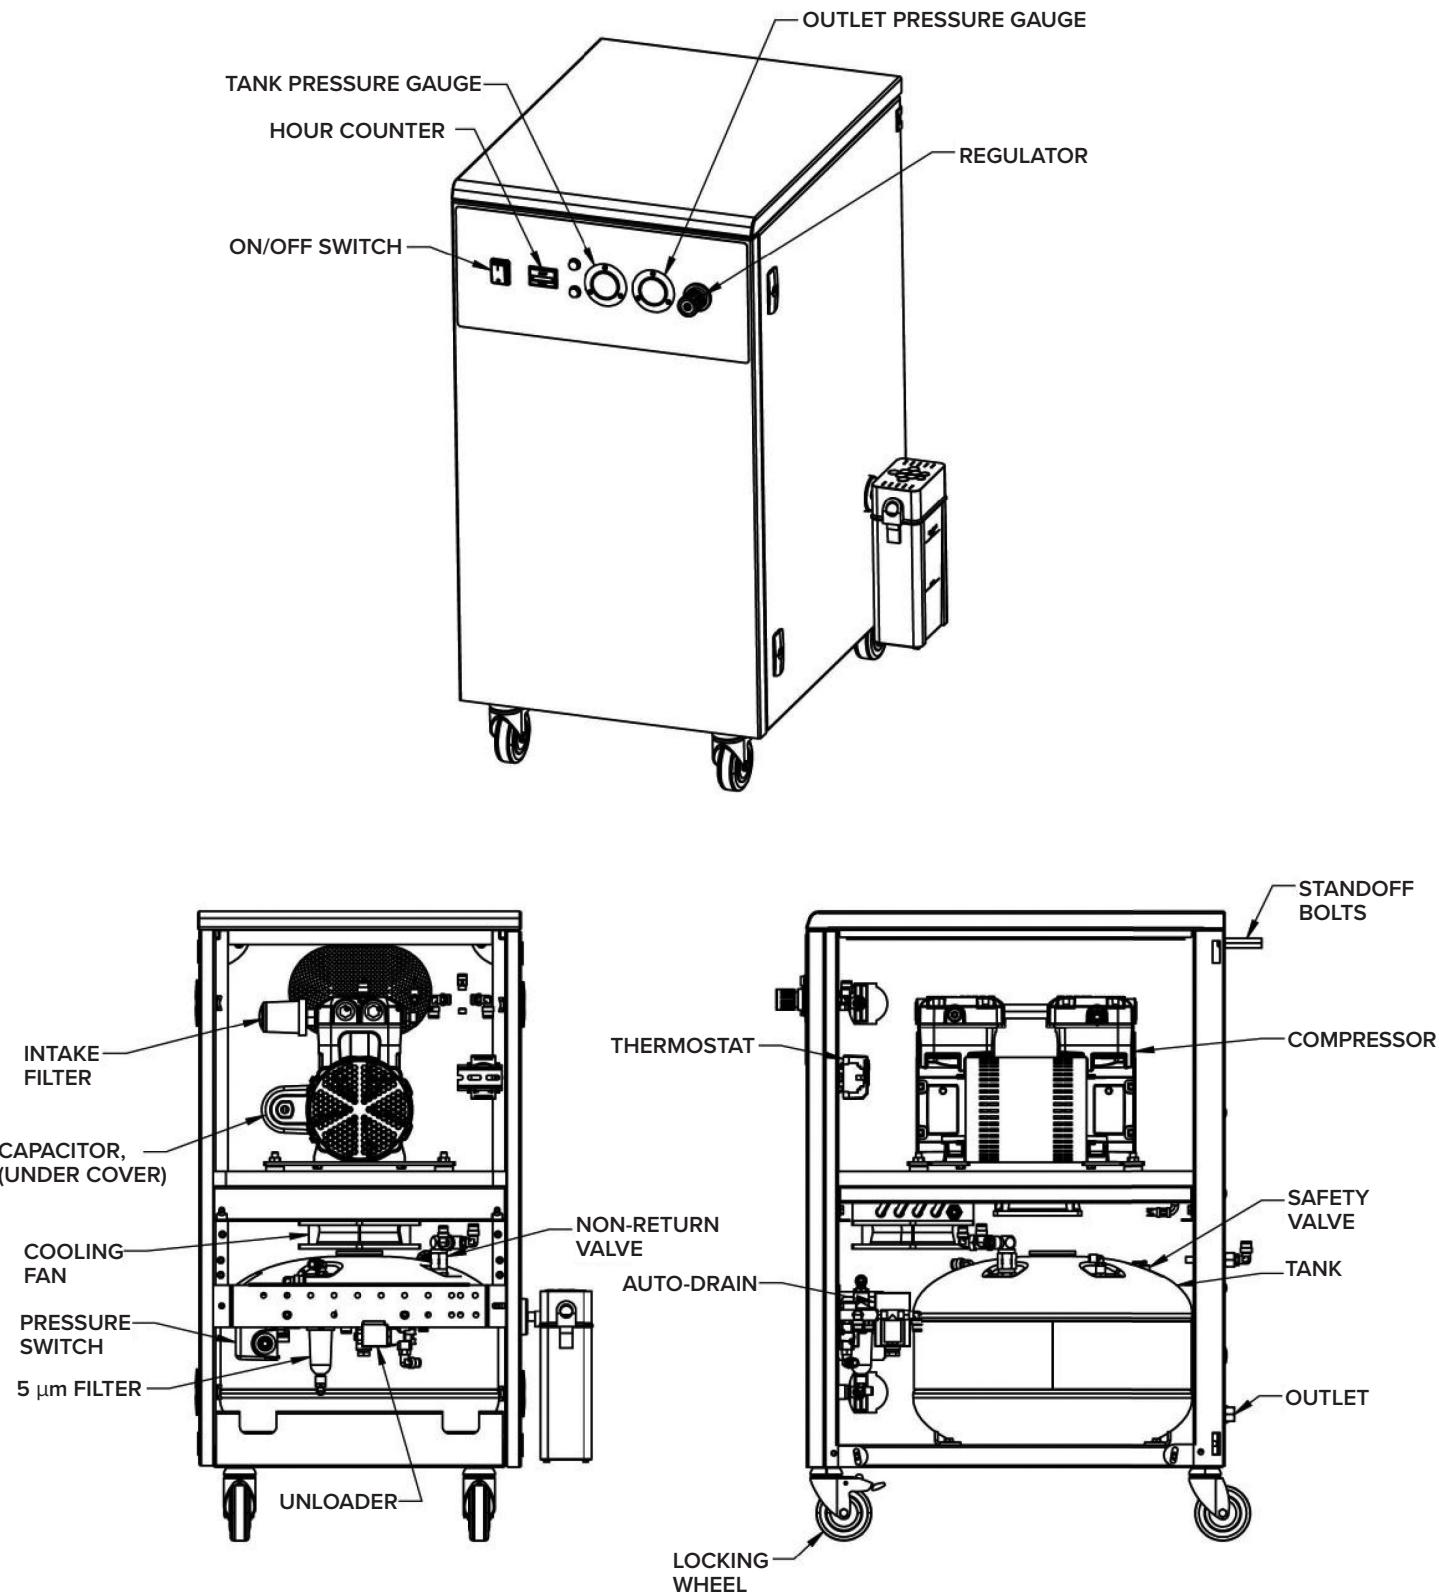



FEATURE DIAGRAMS

Model 106R-25M 230 V

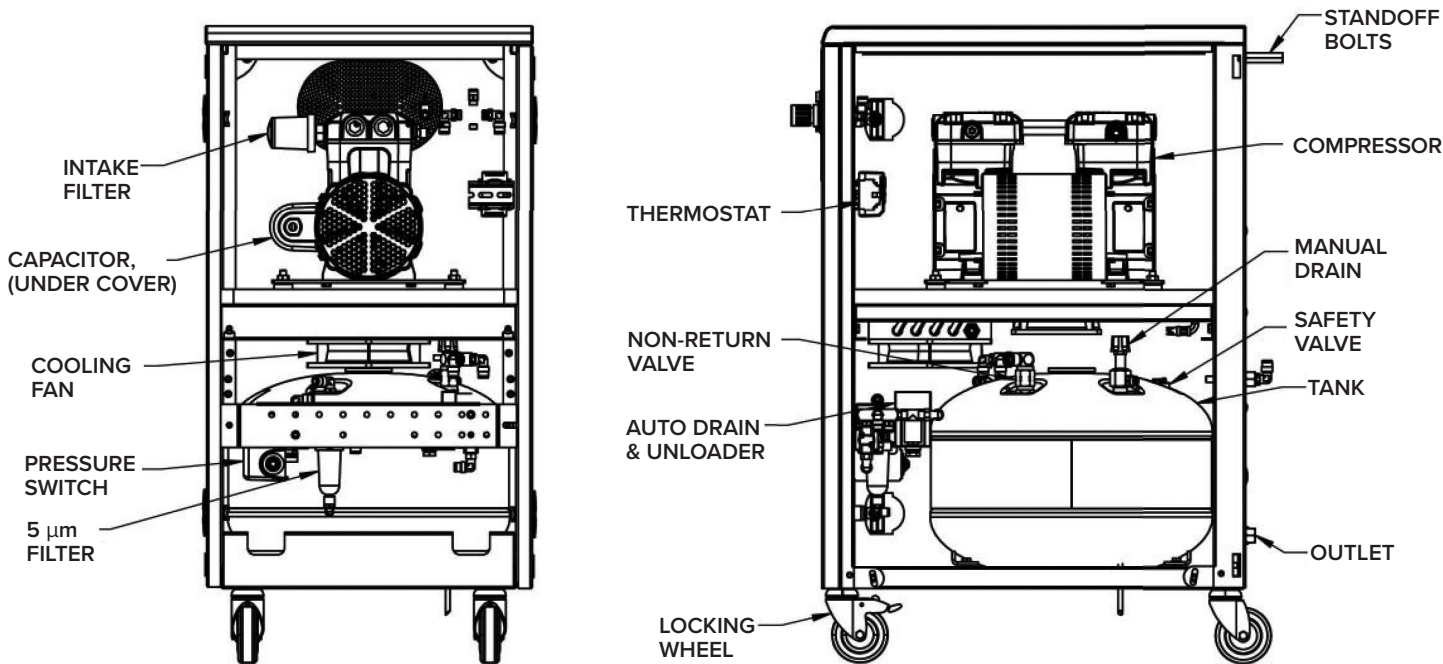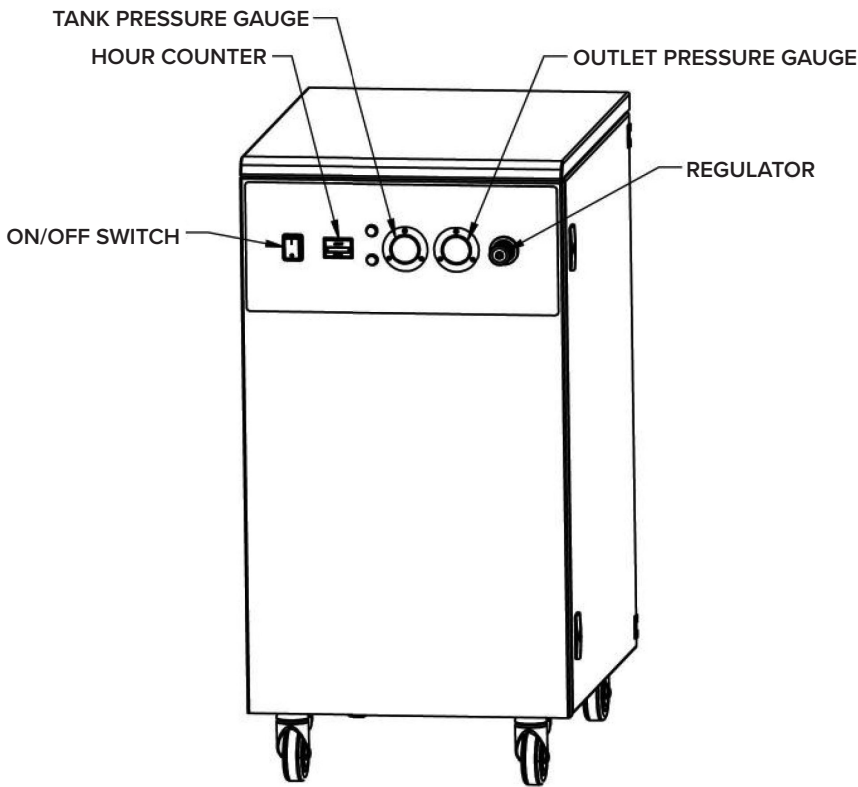


FEATURE DIAGRAMS

Model 106R-25MQ2 120 V

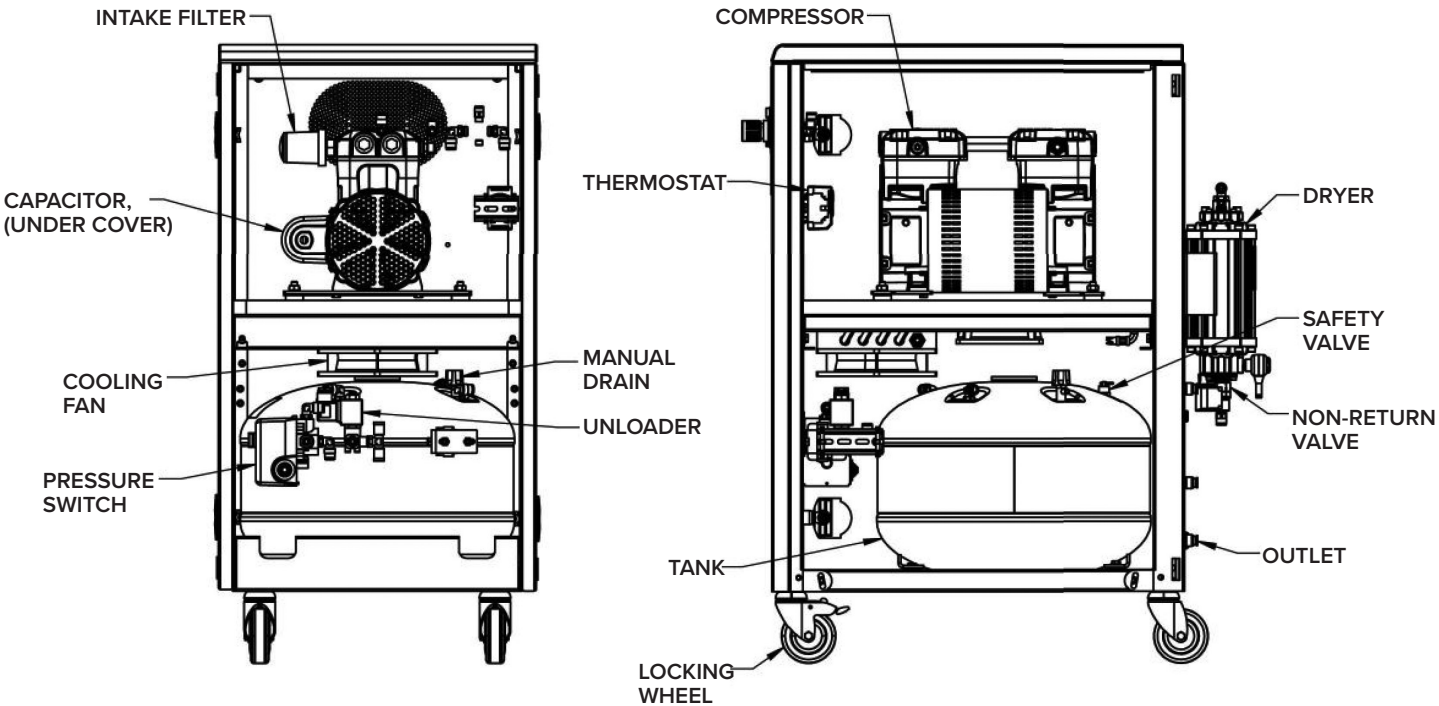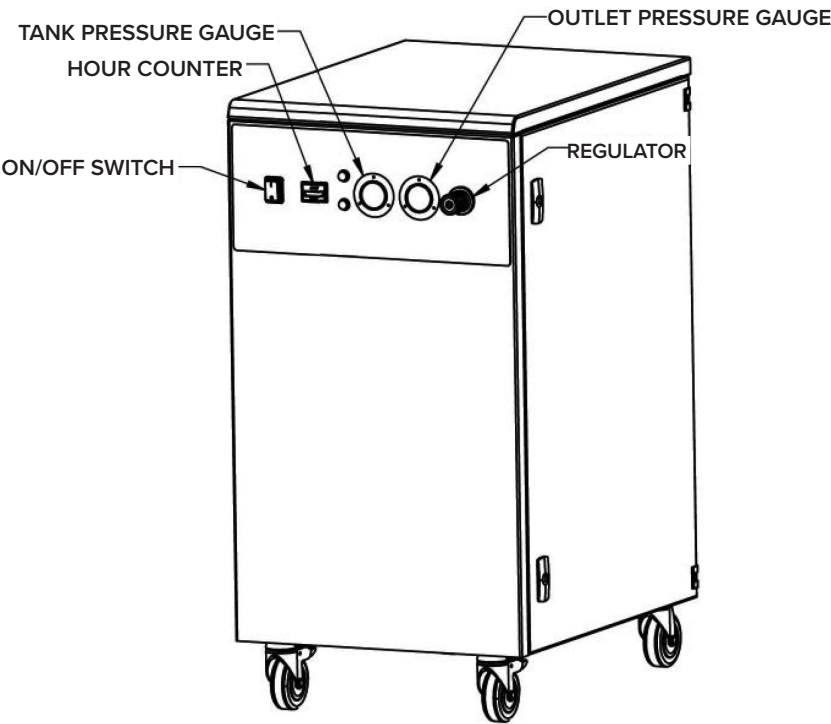


FEATURE DIAGRAMS

Model 106R-25MQ2 230 V

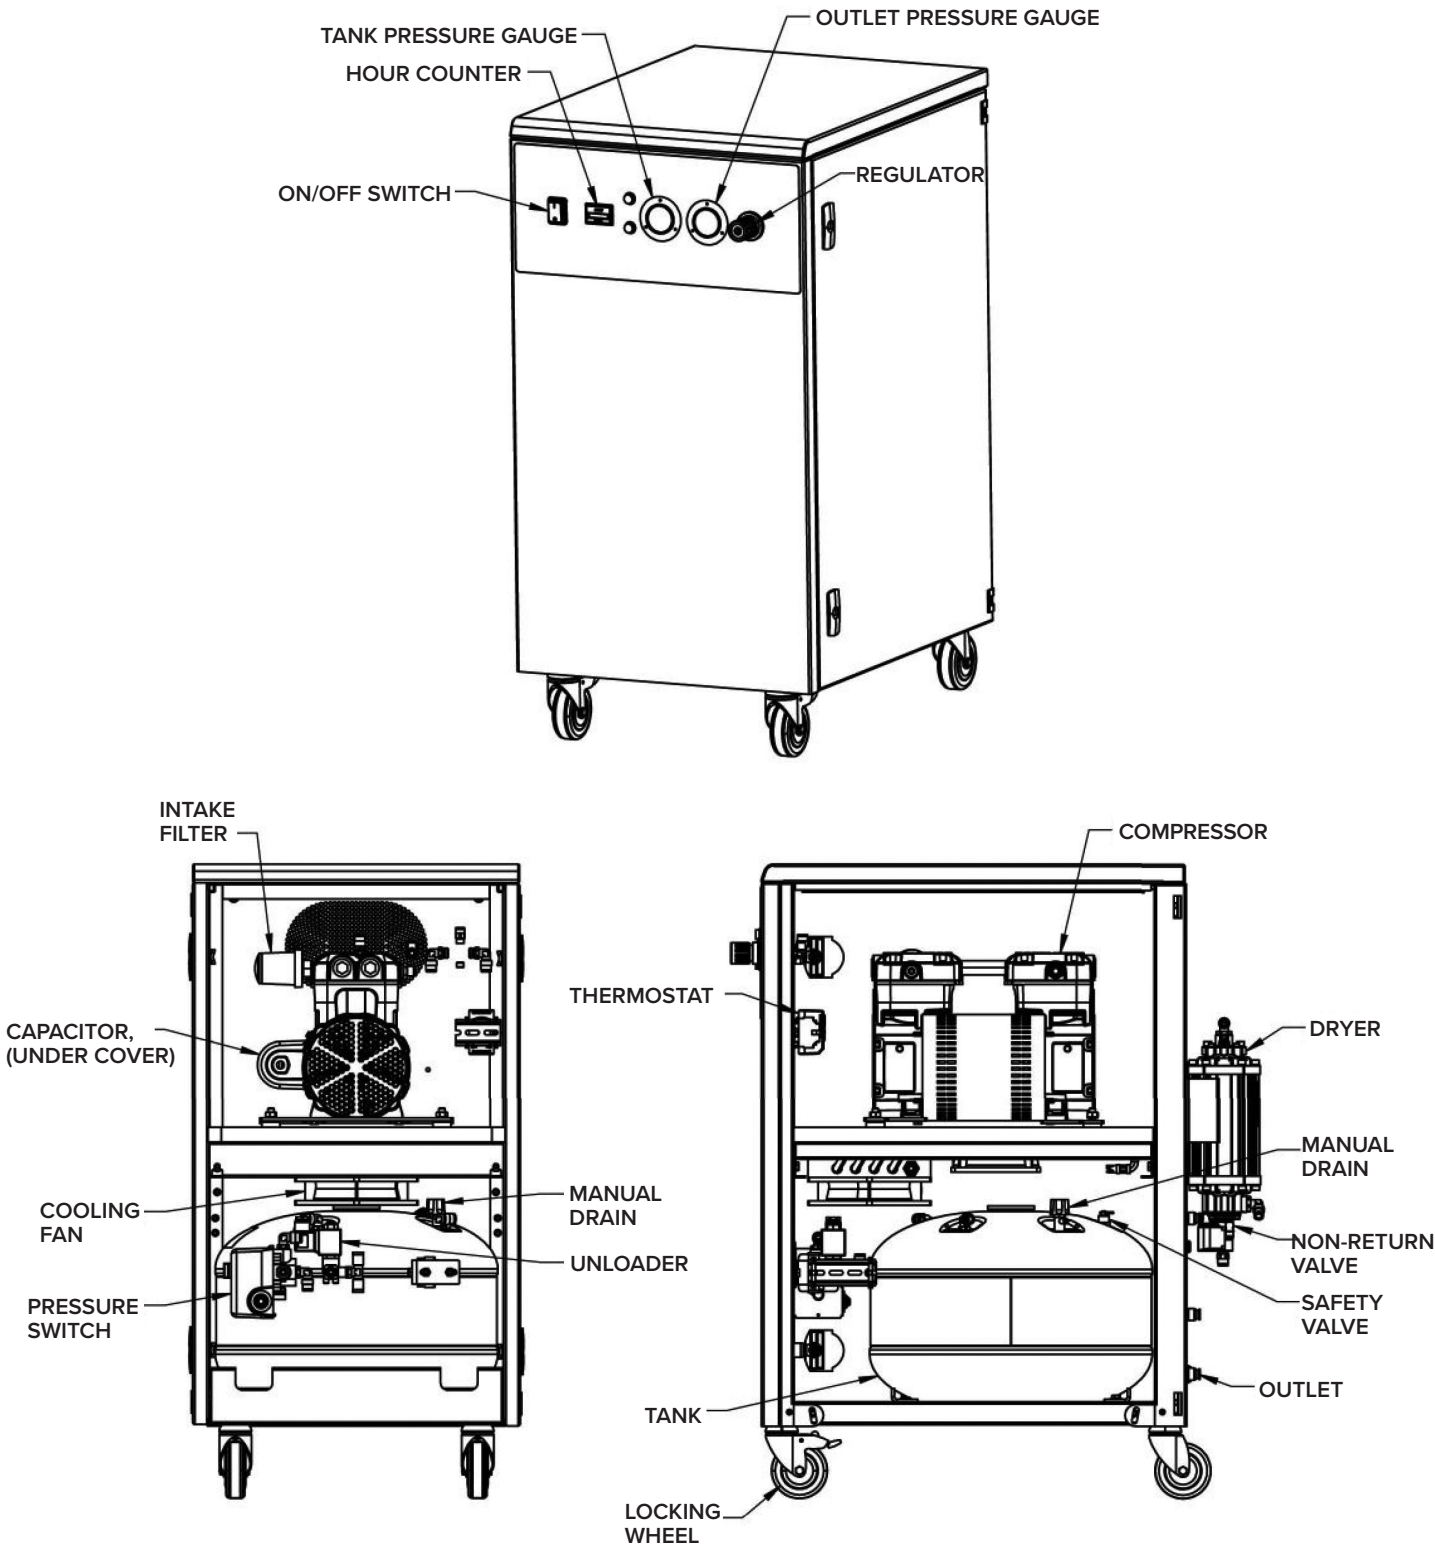


FEATURE DIAGRAMS

Model 2x106R-40M 120 V

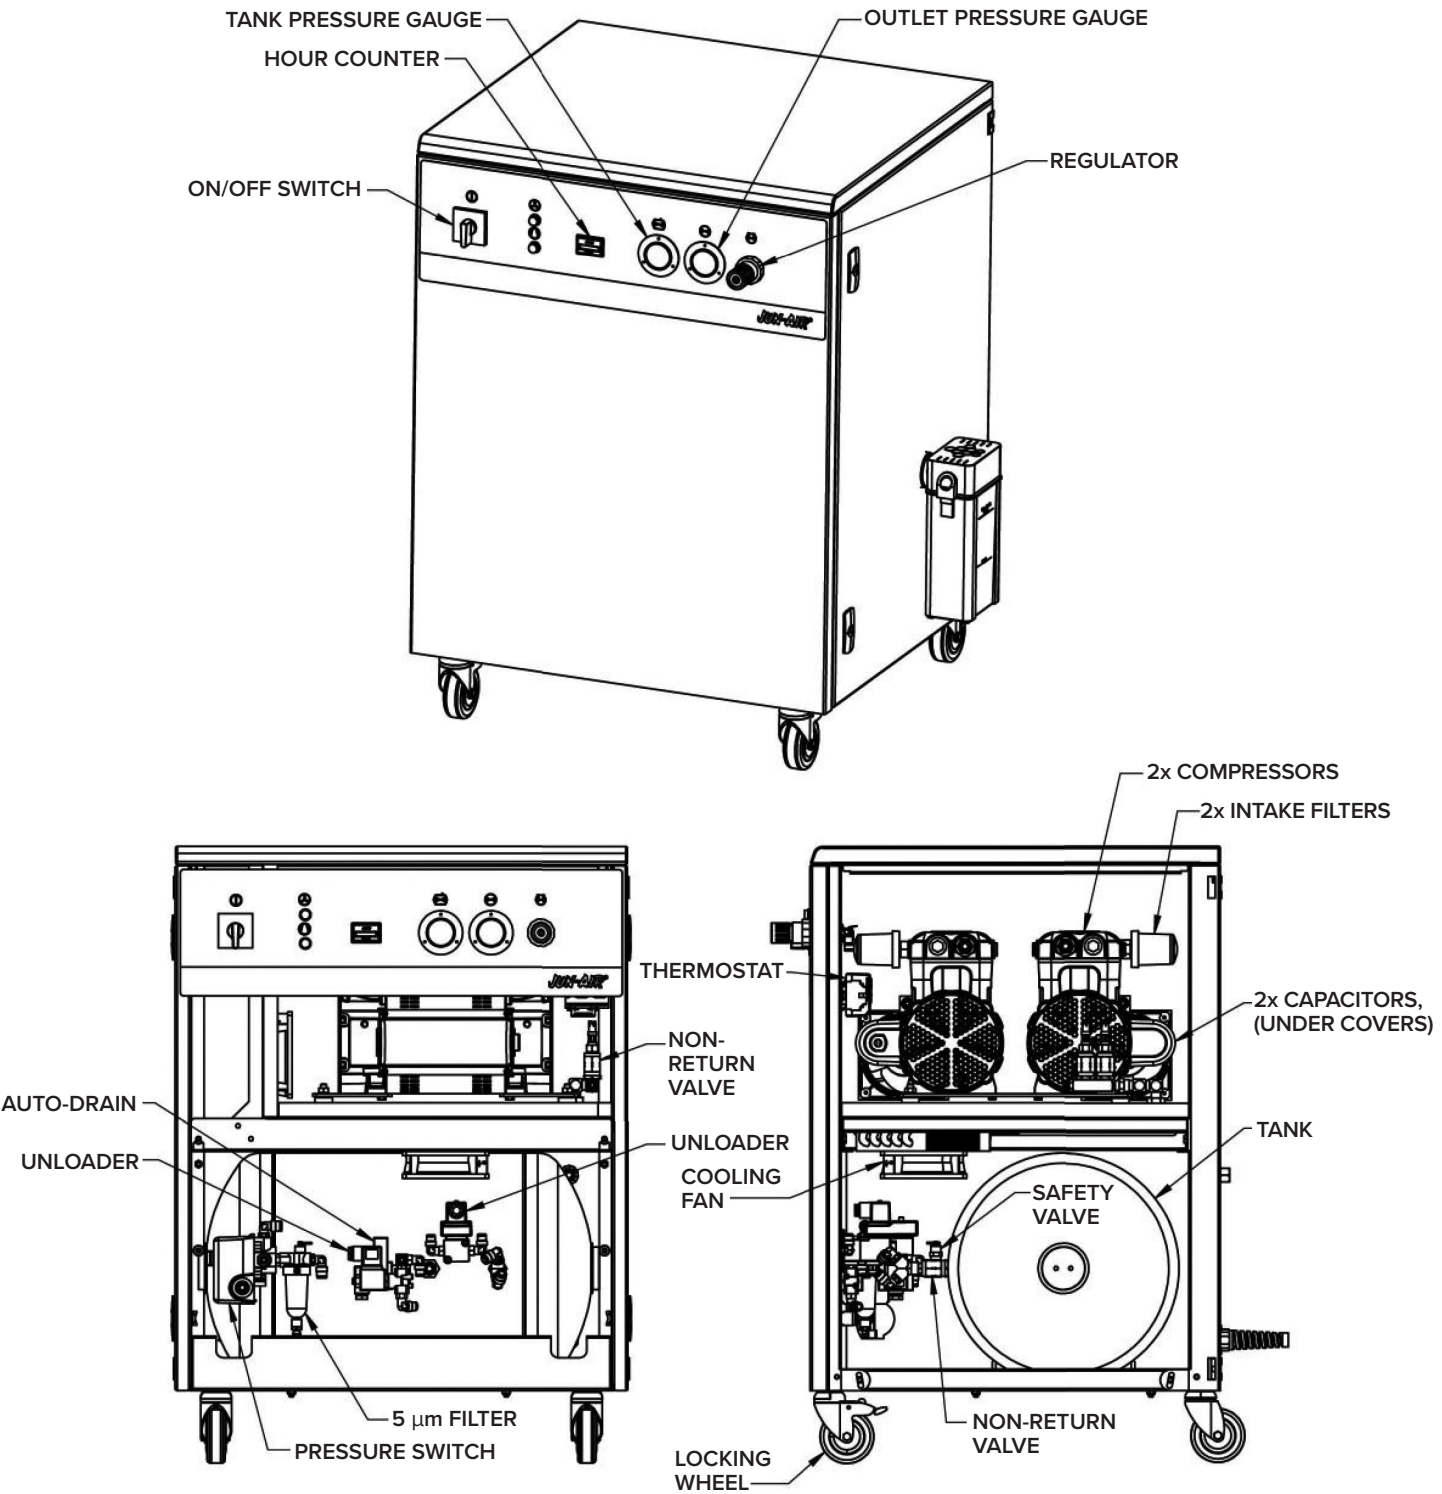


FEATURE DIAGRAMS

Model 2x106R-40M 230 V

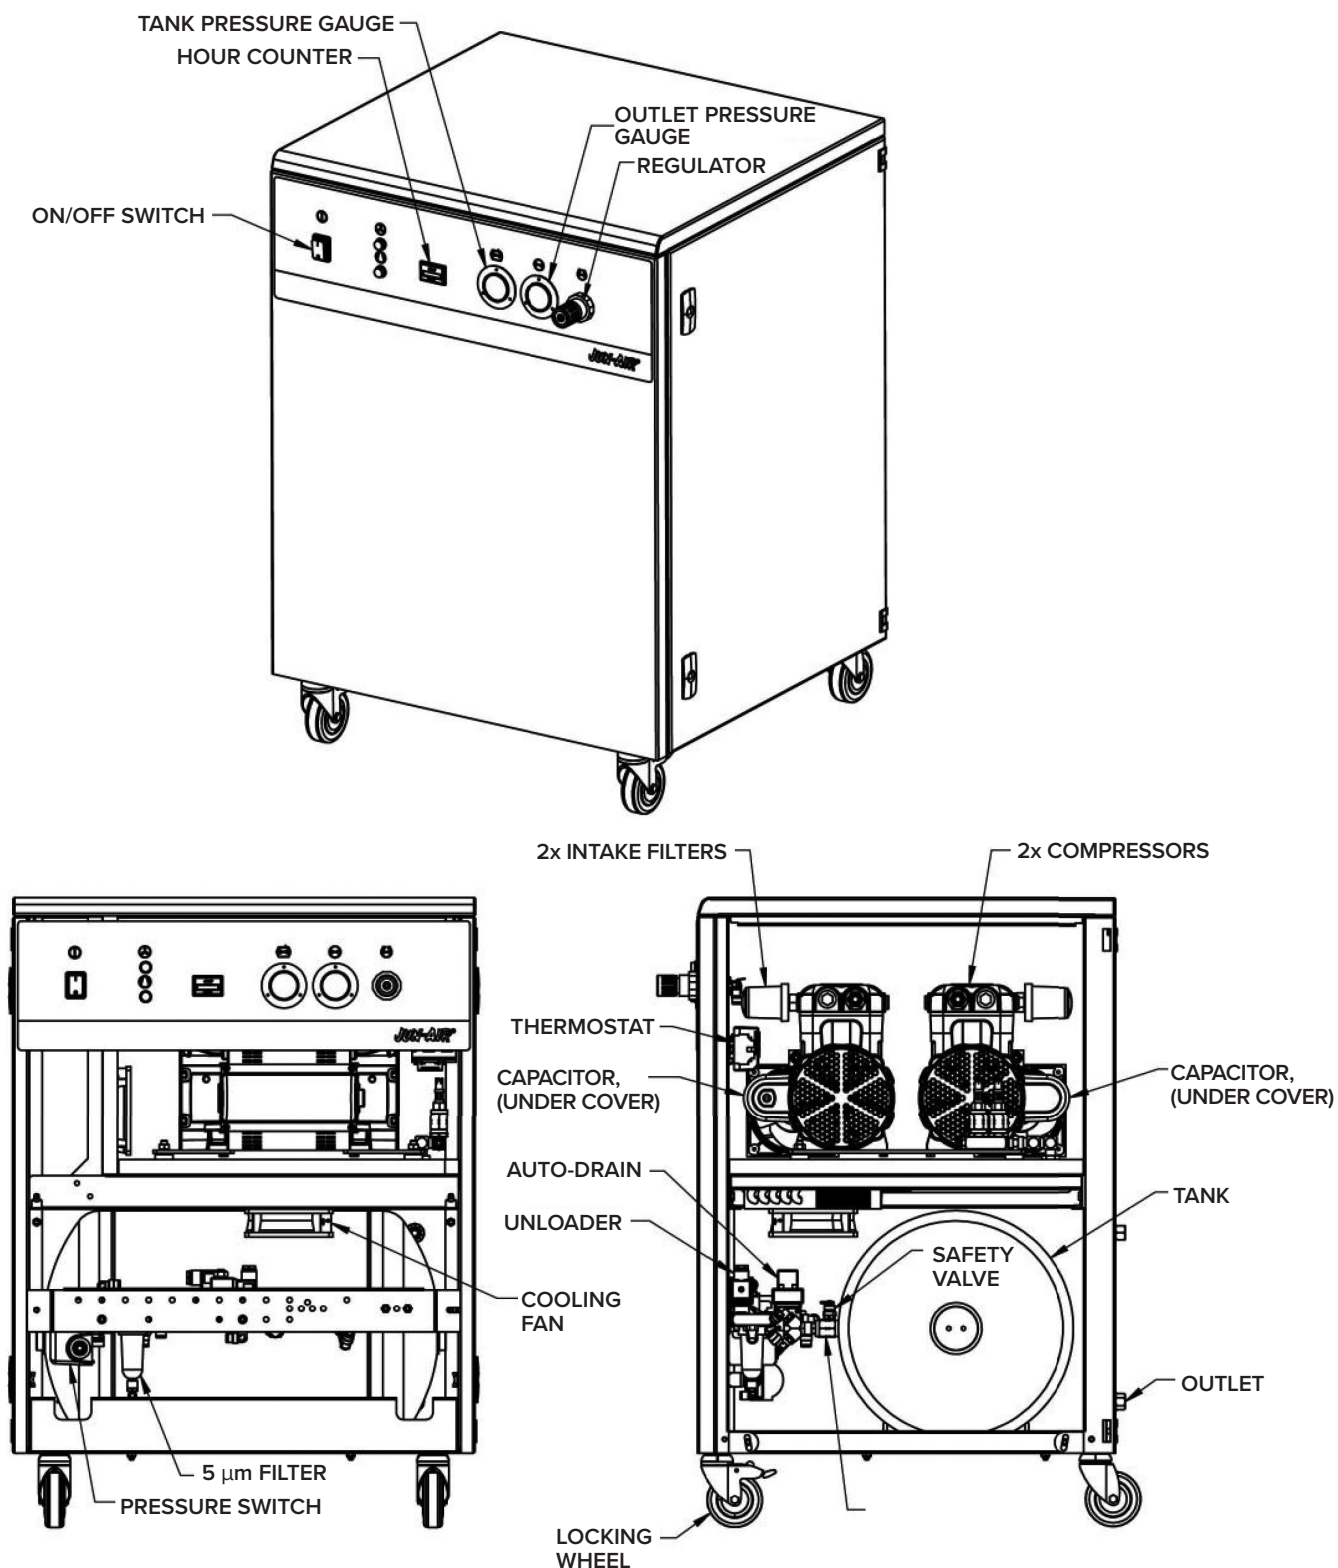


FEATURE DIAGRAMS

Model 2x106R-40MQ2

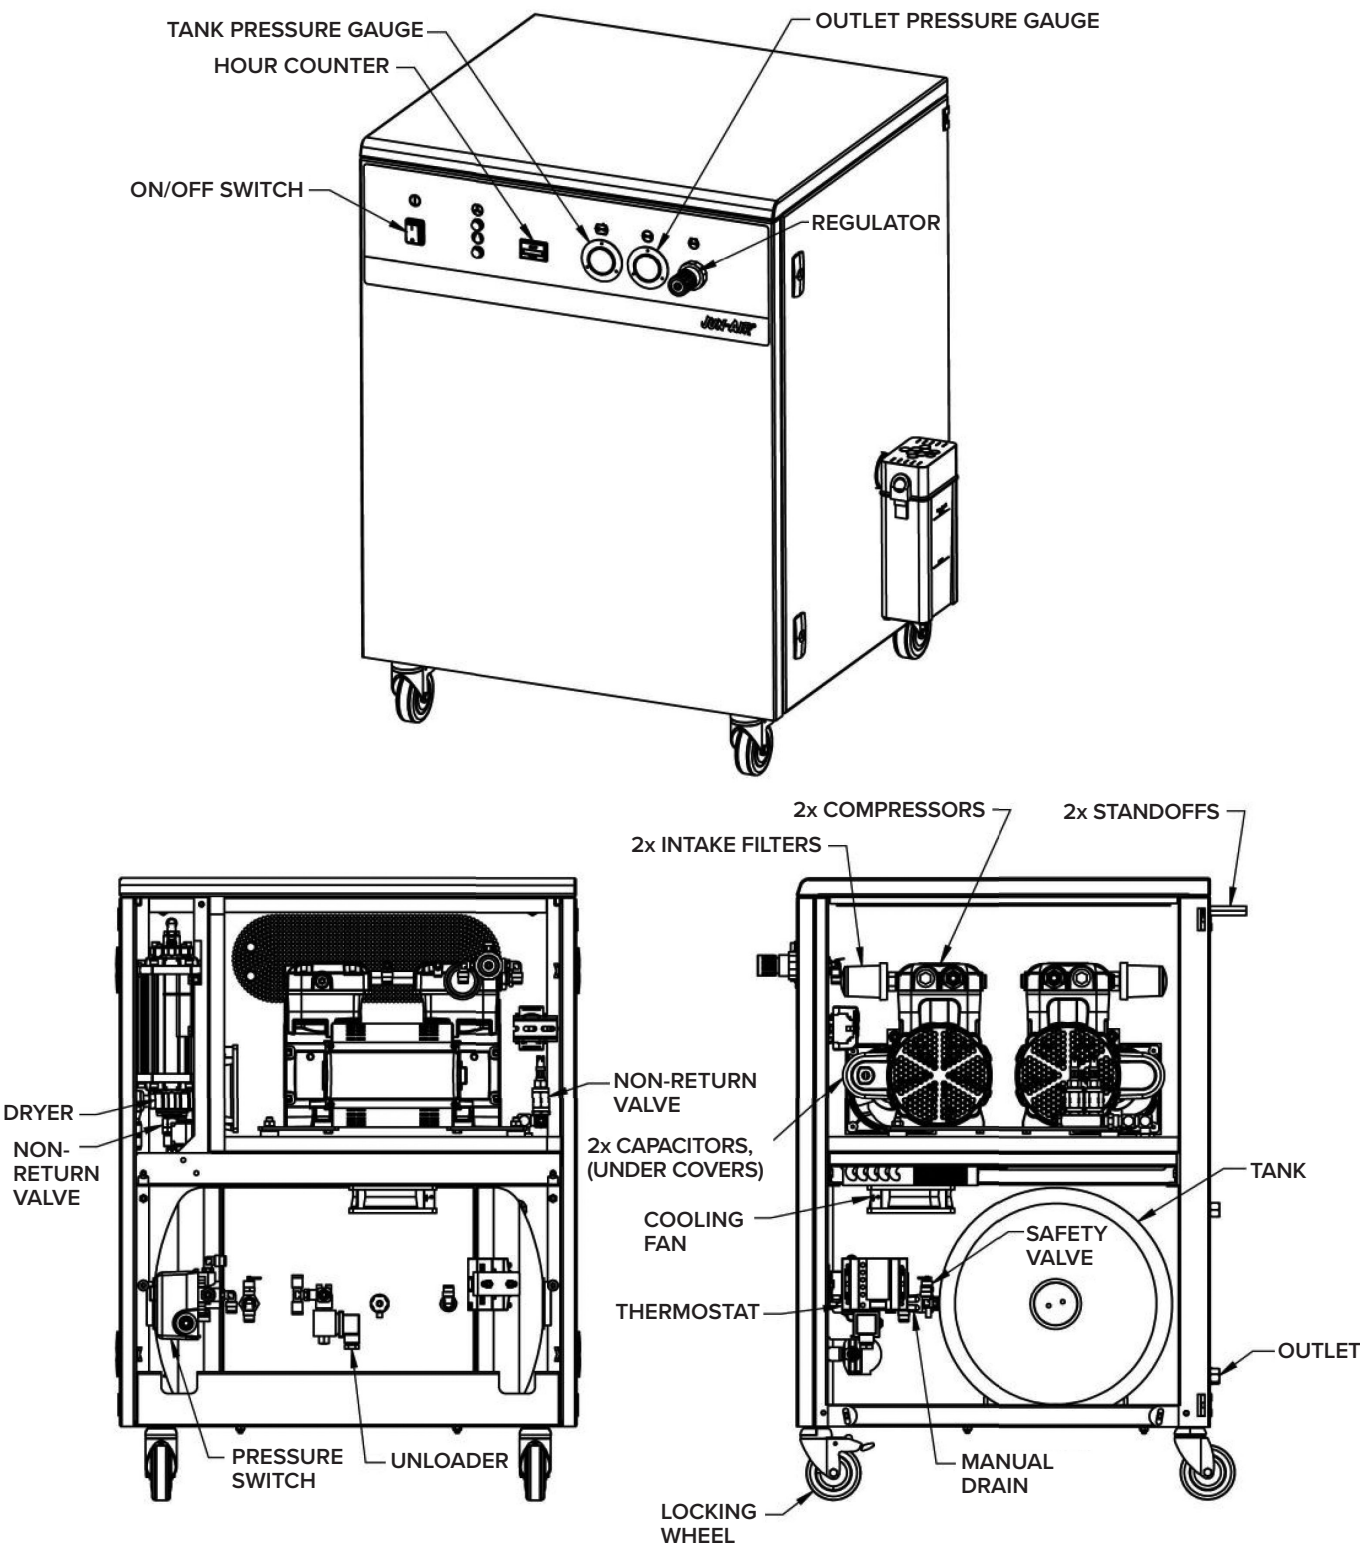

SYMBOLS

The symbols found on the product and packing are explained below.

Symbol	Description
	Caution! Please refer to enclosed documentation
	Warning! Hot surfaces. Risk of burns. Do not touch the compressor head.
	Keep dry. Do not expose to rain.
	Transport and storage: Temperature: -25°C to 55°C / -13°F to 131°F
	Transport and storage: Relative humidity: Maximum 90%
	This side up.
	This side up.
	Fragile. Handle with care.
	Disposal in accordance with existing regulations for electric and electronic equipment.

POTENTIAL WARNING LABELS ON PRODUCT

! WARNING

THIS MOTOR IS THERMALLY PROTECTED AND WILL AUTOMATICALLY RESTART WHEN PROTECTOR RESETS. ALWAYS DISCONNECT POWER SUPPLY BEFORE SERVICING.

! CAUTION

BEFORE STARTING COMPRESSOR, PLEASE REMOVE CAP AND MOUNT THE INTAKE FILTER.

! WARNING

ELECTRIC SHOCK RISK. DISCONNECT BEFORE SERVICING.

DRAIN**OUTLET****! CAUTION**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE TO RAIN. STORE INDOORS.

! WARNING

CONNECT DRAIN BOTTLE BEFORE OPERATION.

! CAUTION

RISK OF BURSTING - DO NOT ADJUST REGULATOR TO RESULT IN OUTPUT PRESSURE GREATER THAN MARKED MAXIMUM PRESSURE OF ATTACHMENT.

! WARNING

IF CONNECTED TO A CIRCUIT PROTECTED BY FUSES, USE TIME DELAY FUSES MARKED "D".

! CAUTION

RISK OF INJURY - DO NOT DIRECT AIR STREAM AT BODY.

! WARNING

MOVING PARTS PRESENT - CAN RESULT IN SERIOUS INJURY TO HANDS OR FINGERS. KEEP HANDS AWAY FROM MOVING PARTS. DISCONNECT AND LOCKOUT POWER BEFORE SERVICING.

! WARNING

PLEASE READ THIS MANUAL COMPLETELY BEFORE INSTALLING AND USING THIS PRODUCT. SAVE THIS MANUAL FOR FUTURE REFERENCE AND KEEP IN THE VICINITY OF THE PRODUCT.

Oil

OIL TYPE: SJ-27F

POTENTIAL WARNING LABELS ON PRODUCT

**CAUTION**



REMOVE WHITE PACKAGING FOAM FROM INSIDE OF CABINET BEFORE OPERATION TO PREVENT DAMAGE TO THE UNIT AND SERIOUS INJURY.

**CAUTION**



RISK OF BURSTING - USE ONLY RECOMMENDED AIR-HANDLING PARTS ACCEPTABLE FOR PRESSURE NOT LESS THAN 125 PSI.

**CAUTION**



DISCONNECT POWER BEFORE OPENING.

Jun-Air[®]
powered by **gast**
(269) 934-1130

SERVICE KIT	PART NUMBER	SERVICE INTERVAL

**CAUTION**

REMOVE MOTOR STRAP BEFORE USE!



Scan this code or visit **gastmfg.com** for more information on where to purchase genuine Jun-Air[®] maintenance kits.

**WARNING**

CONNECT AUTO DRAIN TO DRAIN BOTTLE WITH 6MM HOSE SUPPLIED UNATTACHED.

**WARNING**



IMPROPER INSTALLATION OF THE GROUNDING CABLE PLUG RESULTS IN A RISK OF ELECTRICAL SHOCK.

**CAUTION**



RISK OF BURSTING - OPEN DOOR TO ACCESS DRAIN ASSEMBLY.

—MAX.

—MIN.

MAXIMUM PRESSURE
MINIMUM PRESSURE

WARRANTY

Warranty Policy

If any part of the Jun-Air® system fails under normal use and service within the warranty period described below, the original user/owner must contact an authorized Jun-Air® dealer and provide the product's sales and service records. Should the dealer not be able to complete the repair, the dealer may contact Gast Manufacturing for disposition. The product's model and serial number, the installation date and the Gast Manufacturing invoice number must be furnished. Transportation charges both ways must be paid by the dealer. If upon receipt at the factory an examination reveals faulty or defective original parts, materials, or workmanship, Gast Manufacturing will, at its sole discretion, rebuild or replace. This warranty does not cover damages caused by misuse, abuse, accident, or neglect. Unauthorized alterations or repairs made outside our factory will cancel this warranty and charges for them will not be allowed.

For more warranty information, visit gastmfg.com/warranty.

Jun-Air® Systems

All Jun-Air® systems sold and installed by authorized Jun-Air® dealers are warrantied to be free from defects in parts, workmanship, and materials for one (1) year from date of purchase.

This warranty excludes normal expected service items, including but not limited to: filters/filter kits, o-rings, and hoses. It also excludes add-on accessories that carry their own specific manufacturer's warranty.

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK

Gast Manufacturing

2300 M139 Highway
Benton Harbor, MI 49023
Ph: 269-926-6171
Fax: 269-927-0808

Gast Group Ltd.

Gast Jun-Air® Europe B.V
Hengelderweg 24
NL-6942 NB, Didam
The Netherlands
Phone +44(0)1527 504040

IDEX Technology (Suzhou) Co., Ltd

No.51 TangBang Road
CaoHu Boulevard
Xiang Cheng District
Suzhou, China 215131
Phone (86) 512 6283 3000

Jun-Air®
powered by  **gast**



Additional Languages.



Declaration of Conformity.

gastmfg.com

Jun-Air® is a registered trademark of Gast Manufacturing, Inc. and Gast Group Ltd. © 2026 Gast Manufacturing Inc. All rights reserved.

ISO 9001 CERTIFIED